

Professeur d'anglais
French Professor

MODE D'EMPLOI/ USER'S GUIDE

BOOKMAN® II

Table of Contents

Welcome to the world of Franklin! With the Professeur d'anglais you can find over 2,000,000 translations, correct misspellings, conjugate words, study the Grammar

Guide, save words to My Word List, sharpen your spelling and increase your French vocabulary with six Learning Exercises, and play seven fun, educational word games.

License Agreement	27
Key Guide	28
Installing Book Cards	30
Selecting a Book	30
Changing the Language	31
Using the Main Menu	31
Viewing a Demonstration or Tutorial	32
Changing the Settings	32
Translating French Words	33
Translating English Words	34
Finding Letters in Words	35
Highlighting Words	36
Using the Learning Exercises	36
Using the Grammar Guide	38
Advanced Verb Conjugations	39
Translating Traveller's Phrases	41
Using My Word List	42
Playing the Games	44
Transferring Words Between Books	46
Copyrights, Trademarks, and Patents	47
FCC Notice	47
Limited Warranty (U.S. only)	48

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING ANY BOOKMAN® PRODUCT.

 

 

YOUR USE OF THE BOOKMAN PRODUCT DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE BOOKMAN PRODUCT AND YOUR PURCHASE PRICE WILL BE REFUNDED. BOOKMAN PRODUCT means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

LIMITED USE LICENSE


 

 


All rights in the BOOKMAN PRODUCT remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use the BOOKMAN PRODUCT on a single FRANKLIN BOOKMAN at a time. You may not make any copies of the BOOKMAN PRODUCT or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the BOOKMAN PRODUCT. You may not export or reexport, directly or indirectly, the BOOKMAN PRODUCT without compliance with appropriate governmental regulations. The BOOKMAN PRODUCT contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Key Guide

Color Keys

-  **conj** (Red) Conjugates a word.
-  **lang** (Green) Toggles the entry language between French and English.
-  **dict** (Yellow) Goes to the dictionary.
-  **leçon** (Blue) Goes to the Learning Exercises menu.

Function Keys

-  Turns the product on or off.
-  **aide** Displays a help message. When at an inflection screen, displays Grammar Guide section about the inflection you were viewing.
-  **effac** In the dictionary, goes to the Word Entry screen.
-  **arr** Backs up, erases a letter, or turns off the highlight at an entry.
-  **entrer** Enters a word, selects an item, or begins a highlight in an entry.
-  **menu** Displays the main menus for the dictionary.




At the Word Entry screen, types a ? to stand for a letter in a word. At a menu, displays a menu item. At a dictionary entry, displays the headword. In games, reveals the word and forfeits the game.



Shifts to type capital letters and punctuation marks.



Shifts to allow **préc**, **suiv**, **ht**, **bas** and to type a hyphen (-) or cedilla (ç). In some units, **fn** is replaced by .



Exits the book you were reading.



Direction Keys

Move in the indicated direction.



At menus and dictionary entries, pages down. At the Word Entry screen, types a space.

This card will only work in BOOKMAN II platforms, including the DBD-460, BDS-590, BIL-1640 and BAS-1590/1595 models.

Key Guide

Combination Keys*

- (fn) + ↑**
or **↓** At a dictionary entry, pages up or down.
- (fn) + →**
or **←** At a dictionary entry, displays the next or previous entry.
- (maj) + ↑**
or **↓** At a menu, goes to the first or last item. At a dictionary entry, goes to the start or end of the entry.
- (fn) +**
(carte) Transfers a word between books.
- (fn) + C** Types a **ç**.
- (fn) + j** Types a hyphen.
- (fn) + (?)** Goes to the traveller's phrases menu. If a word is in the Word Entry screen or is highlighted, finds any phrases containing that word.
- (maj) + (?)** At the Word Entry screen, types an asterisk to stand for a series of letters in a word. In games, gives a hint.

**Hold the first key while pressing the second.*


The red, green, yellow, and blue keys on your BOOKMAN change functions according to which book is selected. When the built-in book is selected, the colour keys function as labelled on the BOOKMAN keyboard. When a book card is selected, the colour keys function as labelled on that book card.

When the language or languages in your book card are different from those in your built-in book, the key references may also be different. Please refer to the grid below for help in determining a particular key's function.

Deutsch	Français	English	Italiano	Español	Symbols
hilfe	aide	help	guida	ayuda	-----
clear	effac	clear	canc	borrar	-----
zurück	arr	back	indietro	retro	
eingabe	entrer	enter	invio	intro	-----
menü	menu	menu	menu	menú	-----
groß	maj	cap	maiusc	mayús	
fn	fn	fn	fn	fn	
karte	carte	card	sched	tarjet	-----
leer	espace	space	spazio	espaciador	
auf	ht	pg up	giu	abajo	; fn +
ab	bas	pg dn	su	arrib	; fn +
nächste	suiv	next	seg	sig	+ ; fn +
vorig	préc	prev	prec	prev	+ ; fn +

Installing Book Cards

 1. Turn your product off.
2. Turn your product over.
3. Align the tabs on the book card with the notches in the slot.

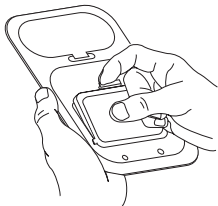

4. Press the book card down until it snaps into place.

► Removing Book Cards

Warning: Never install or remove a book card while your product is on. Any information that was entered in the built-in book or book card will be erased.

► Book Card Troubleshooting

If your book card is performing erratically, follow the reset instructions for your platform. If this does not fix the problem, remove the book card and then remove the white rubber strip located between the two metal pins. Clean the rubber strip with your fingers and then replace it making sure it is completely in its notch.

Selecting a Book

Once a book card is installed in the product, you can select which book you want to use.

1. Turn your product on.
2. Press **(carte)**.



These are sample books.

3. Press **(+)** or **(-)** to highlight your selection.



For information on available Franklin Bookman products, highlight the Bookman Info Icon, **(INFO)**.

4. Press **(entrer)** to select it.


► About Screen Illustrations

Some screen illustrations in this User's Guide may differ slightly from what you see on screen. This does not mean that your product is malfunctioning. The examples in the English half of this manual use English as the message language.

Changing the Language

Message Language

When you turn on this product for the first time, you must choose the message language. Press **a** for French or press **b** for English.




English: press **B**

The message language is the language of prompts, help, and other messages. You can change the message language after your initial decision. See “Changing the Settings” on page 32 to learn how.

Entry Language

The entry language is the language in which you enter words at the Word Entry screen. This determines which dictionary you will use, French or English.

1. Press **(menu)**.
2. Use the direction keys to highlight , and then press **(entrer)** to access the French-to-English dictionary.

Select  at the icon menu to go to the English-to-French dictionary.

Or you can press **(lang)** at the Word Entry screen to switch between French and English.

Using the Main Menu

When you press **(menu)**, you will see ten icons. Use these to quickly take you to different parts of your Professeur d'anglais.



► Understanding the Menu



Goes to the English-to-French dictionary.



Goes to the French-to-English dictionary.



Goes to the Learning Exercises menu.



Goes to the Games menu.



Goes to the English conjugation prompt.



Goes to the French conjugation prompt.



Goes to the English traveller's phrases menu.



Goes to the French traveller's phrases menu.



Goes to My Word List.



Goes to the Tools menu.

1. Press **(menu)**.



will be highlighted the first time you press



2. Use the arrow keys to highlight the icon you want and press **(entrer)**.

 
Viewing a Demonstration or Tutorial

You can view a demonstration or tutorial of this dictionary at any time.

1. Press **menu**.
2. Use the arrow keys to highlight



and press **enter**.



3. Press **↓** to highlight either **Tutorial** or **View Demo** and press **enter**.

To stop the demonstration or exit from the Tutorial and go to the Word Entry screen, press **effac**.

To go to the main menu, press **menu**.

When a book card is installed in your product, select *View Demo* from the Setup menu to see the demonstration for that card.

► Follow the Arrows

The flashing arrows on the right of the screen show which arrow keys you can press to move around menus or view more text.

Changing the Settings

When using this dictionary, you can activate the *Learn a Word* feature, or adjust the screen contrast, the shutoff time, the type size, and the message language. The shutoff time is how long your product stays on if you forget to turn it off.

1. Press **menu** in the dictionary.
2. Use the arrow keys to highlight



and press **enter**.

3. **Settings** will be highlighted. Press **enter** to select it.



4. Press **↓** or **↑** to move **▶** to **Learn a Word, Contrast, Shutoff, Type Size, or Messages**.
5. Press **←** or **→** to change the setting.


Your changes are automatically saved.

6. Press **enter** when done.

Press **effac** to return to the Word Entry screen.

Changing the Settings

► Learn a New Word

Your dictionary comes with a *Learn a Word* feature to help you increase your French or English vocabulary. Each time you turn your Professeur d'anglais on, you can see a different headword taken from the dictionary. If you wish to turn this feature on, press **menu**. Highlight  and press **entrer**. Press **entrer** again to select *Settings*. Press **←** or **→** to turn the feature on and press **entrer** when done.

When French is the entry language, you will be shown a French word and when English is the entry language, you will be shown an English word. To learn how to change the entry language, read *Changing the Language* on page 31.

► Help is Always at Hand

You can view a help message at any screen by pressing **aide**. Press **espace** or **↓** to read. To exit help, press **effac**.

Translating French Words

 
Your Professeur d'anglais is fully bilingual. Try translating a French word.

1. Press **lang to change the entry language from English to French, if needed.**

2. Type a word (e.g., *étude*).

To erase a letter, press **arr**. Note: you do not need to type accents. To type accents, if desired, type the letter (e.g., **e**) and press **∅** repeatedly until the accent you want appears (e.g., **é**). If you want to type a ç, then hold **fn** and press **c**. To type a capital, hold **maj** and press a letter key. To type a number, hold **fn** and press **a-p**. To type a hyphen, hold **fn** and press **j**.

3. Press **entrer to view the English translation.**



étude (feminine noun)
1. [gén] study
► à l'étude under consideration
► étude de faisabilité feasibility study

Press **espace** or **↓** to scroll.

4. Hold **fn and press **→** or **←** to view the next or previous definition.**

5. Press **effac when done.**

Translating French Words

► Understanding Definitions

Dictionary entries consist of headwords, parts of speech, and/or definitions. Other forms of the word may follow the headword. Capitalized words indicate the category for which the word is used. After the translation, you may see a list of usage examples.

1. Type **savoir**.

2. Press **(entrer)**.

```
savoir
◇ (transitive verb)
1. [gen] to know
► faire savoir qqch à qqn to
tell sb sthg, to inform sb of
```

► Explanation of Genders

French nouns are different than English nouns in that they must either be masculine or feminine. Each definition of a noun indicates which gender it is with *m* or *f*.

► Misspelling Words

If you enter a misspelled word, a list of corrections appears. Highlight the word you want and then press **(entrer)** to see its dictionary entry.

Translating English Words

You can also use the Professeur d'anglais to translate English words into French.

1. Press **(lang)** to change the entry language from French to English, if needed.

2. Type a word (e.g., **how**).

To erase a letter, press **(arr)**. Note: you do not need to type accents. To type accents, if desired, type the letter (e.g., **e**) and press **(j)** repeatedly until the accent you want appears (e.g., **é**). To type a capital, hold **(maj)** and press a letter key. To type a number, hold **(fn)** and press **a-p**. To type a hyphen, hold **(fn)** and press **j**.

3. Press **(entrer)** to view the French translation.

```
how (adverb)
1. [gen] comment
► how do you do it? comment
fait-on?
► how are you? comment al-
```

Press **(espace)** or **(j)** to scroll.

4. Hold **(fn)** and press **(→)** or **(←)** to view the next or previous definition.

 
5. Press **(effac)** when done.

Translating English Words

► Choosing Multiple Forms

Some words in this dictionary have more than one form (e.g. resume, résumé). When the word you are looking up has multiple forms, the different forms appear in a list.

Simply highlight the form you want and press **(entrer)** to see its dictionary entry. For example, enter *resume* at the Word Entry screen.




Highlight the form you want and press **(entrer)** to see its dictionary entry. To go back to the Multiple Forms list, press **(arr)**.

Finding Letters in Words

If you are uncertain about how to spell a word, type a question mark (?) in place of each unknown letter. To find prefixes, suffixes, and other parts of words, type an asterisk (*) in a word. Each asterisk stands for a series of letters. **Note:** If you type an asterisk at the beginning of a word, it may take a little while to find the matching words.

1. Press **(lang)** to switch to the **French Word Entry screen, if needed.**

 2. Type a word with ?s and *s.



To type an asterisk, hold down **(maj)** and press **(?*)**.

3. Press **(entrer)**.



 
4. Press **(↓)** to move the highlight to the word you want and press **(entrer)** to view its definition.

5. Press **(effac)** when done.

Highlighting Words

Another way to look up words is by highlighting them in dictionary entries or word lists. You can then find *their* definitions, phrases, or add them to *My Word List*.


1. At any text, press  to start the highlight.



écrire (transitive verb)
1. [phrase, livre] to write
2. [orthographe] to spell
◆ s'écrire (pronominal verb)
[s'épeler] to be spelled.

To turn the highlight off, press .

 2. Use the arrow keys to move the highlight to the word you want.



écrire (transitive verb)
1. [phrase, livre] to write
2. [orthographe] to spell
◆ s'écrire (pronominal verb)
[s'épeler] to be spelled.

To ...

define the word

 


find a phrase

 + 

add word to *My Word List*




3. Press  when done.

Using the Learning Exercises

Using the Learning Exercises, you can read cultural notes, test your spelling, improve your vocabulary, browse the TOEFL® Test Word List, and get grammar guidance (see “Using the Grammar Guide” on page 38).

Cultural Notes

 1. Press , highlight  and press .


Or you can press .

2. Use  to highlight **Cultural Notes** and press .

You can choose to read either French cultural notes which refer to France, or English cultural notes which refer to the United Kingdom and the United States.

Spelling Bee

 1. Press , highlight  and press .

Or you can press .

2. Use  to highlight **Spelling Bee** and press .

You can choose *My Spelling Bee (English)* which uses English words from *My Word*

TOEFL and the Test of English as a Foreign Language are registered trademarks of Educational Testing Service (ETS). This product is not endorsed or approved by ETS.

Using the Learning Exercises

List, *My Spelling Bee (French)* which uses French words from My Word List, or the *TOEFL® Test Spelling Bee* which uses words from the TOEFL® Test Word List.

3. Highlight the word list you want and press **enter**.

A word will flash on the screen for you to spell.

4. Type in the word you just saw and press **enter** to see if you spelled it right.

Press **enter** to see the definition. Press **arr** to return to Spelling Bee.

6. Press **espace** for a new word.

7. Press **effac** when done.

Flashcards

1. Press **menu**, highlight and press **enter**.

Or you can press **leçon**.

2. Use to highlight *Flashcards* and press **enter**.

You can choose *My Flashcards (English)* which uses English words from My Word List, *My Flashcards (French)* which uses French words from My Word List, or

Using the Learning Exercises

TOEFL® Test Flashcards which uses words from the TOEFL® Test Word List.

3. Highlight the word list you want and press **enter**.

A word will be displayed on the screen for you to study or define. Press **enter** to see the definition. Press **arr** to return to Flashcards.

4. Press **espace** to see a new word.



5. Press **effac** when done.

Viewing the TOEFL® Test Word List

1. Press **menu**, highlight and press **enter**.

Or you can press **leçon**.


 
2. Use to highlight *TOEFL® Test Word List* and press **enter** to view the list.

Press  or  to scroll.


 
You can also type the first few letters of a word to find it on the list (e.g., type **col** to find *collaborate*).


Press **enter** or **conj** at any word to view its definition or to conjugate it. Press **arr** to return to the list.







 
Using the Grammar Guide

Your Professeur d'anglais includes a helpful grammar guide that describes parts of speech. You can view it by selecting  from the main menu or by pressing .

From the Learning Exercises Menu






 


1. Press .
2. Highlight  and then press .
Or you can press .
3. Press  to highlight **Grammar Guide** and then press .



4. Press  to highlight the topic you want to study and then press .
5. Press  or  to read.
6. Press  +  or  to view the next or previous topic.

Using the Grammar Guide

 
From an Inflection Screen


1. Press , highlight  or , and then press .
2. Type a word to conjugate, and then press .
3. Press  +  or  repeatedly to find the tense you want to read about in the Grammar Guide.





INDICATIVE SIMPLE PAST
je pensai
I thought
tu pensas
you thought

4. Press .



Press  to view this help message.
The *passé simple* (past definite or past historic) is used to record a completed action in the past.

Information about the tense will be displayed along with usage examples.

5. Press  to return to the inflection screen or press  to return to the Word Entry screen.

Advanced Verb Conjugations

Conjugations show inflections, or changes in a word's gender, tense, etc. This dictionary includes extensive inflections of nouns, verbs and adjectives.

From the Icon Menu

1. For example, press **menu**, use the arrow keys to highlight **DOMNER** (French Conjugation), and then press **entrer**.

To choose English conjugation, press **GIVE**. You can also press **conj** and then **lang** to choose the language.

2. Type a word (e.g., *lire*).

3. Press **conj**.

If needed, highlight the part of speech or translation you want and press **entrer**.

OVERVIEW
je **lis** (today)
I **read** (today)
je **lirai** (tomorrow)
I **will read** (tomorrow)

These are the principal forms of the French verb "lire". The English translations are below each French inflection.

4. Press **espace** or **↓** to scroll.

Press **?** to display the root word.

Advanced Verb Conjugations

5. Press either **conj** or hold **fn** and press **↓** repeatedly to view more inflections.

6. Press **effac** when done.

From a Dictionary Entry

Some words have different parts of speech or multiple translations. You can easily find which part of speech or specific translation you will need to conjugate by first looking up the word and then pressing **conj**. Follow this example.

1. Press **menu**, use the arrow keys to highlight **FR**, and then press **entrer**.

To choose English, press **ENG**. You can also press **conj** and then **lang** to choose the language.

2. Type a word (e.g., *écrire*).

3. Press **entrer** to look it up.

écrire (transitive verb)
1. [phrase, livrel to write
2. [orthographe] to spell
♦ **s'écrire** (pronominal verb)
[s'épeler] to be spelled.

Read the definition to find the verb you want (e.g., *to write*).

Advanced Verb Conjugations

4. Press **(conj)** to conjugate the headword, *écrire*.

Highlight the part of speech you want (e.g., *verb*) and press **(entrer)**. Then highlight the translation you want (e.g., *write*) and press **(entrer)**.

OVERVIEW
j'**é**cris (today)
I **w**rite (today)
j'**é**crirai (tomorrow)
I **w**ill write (tomorrow)

These are the principal forms of the French verb “écrire”. The English translations are below each French inflection.

5. Press **(espace)** or **(↓)** to scroll.

Press **(?)** to display the root word.

6. Press either **(conj)** or hold **(fn)** and press **(↓)** repeatedly to view more inflections.

7. Press **(effac)** when done.

Advanced Verb Conjugations

► Accenting Letters

You can look up accented words without typing accents. If there are no Multiple Forms, the Professeur d'anglais will take you directly to the word. If there are Multiple Forms, you will have to choose the correct word from a Multiple Forms list. See “Choosing Multiple Forms” on page 35 for more information.

Remember, if you want to enter an accent yourself, type the letter and press **(↑)** until the appropriate accent appears. You can also hold **(fn)** and press **c** to type a ç.

► Getting Grammar Guidance

 
When viewing inflections, you can press **(aide)** to go directly to the Grammar Guide and view detailed descriptions of how to use the inflections you were viewing along with usage examples.

Press **(h)** to view this help message.
NOUNS
Every noun in French is either masculine or feminine in gender. _____

Advanced Verb Conjugations

► Viewing English Inflections

If you are unfamiliar with inflections, it may be helpful to look at some inflected forms of English verbs. Switch the entry language back to English, type *write*, and press **(conj)** to see the different forms of the English verb “to write”.



This will give you a good idea of each inflection form.

► Verb Conjugations


The Professeur d'anglais conjugates French verbs into the following forms: present indicative, indicative imperfect, indicative simple past, simple future indicative, present conditional, present subjunctive, imperfect subjunctive, indicative passé composé, pluperfect indicative, indicative past anterior, indicative future anterior, conditional perfect, perfect subjunctive, pluperfect subjunctive, imperative, present participle, and past participle.

 
Translating Traveller's Phrases

There are two ways in which you can translate several helpful phrases in categories ranging from *Emergencies* to *Business Communication* to *Time & Dates*. Note that the English phrase always appears before the French phrase.

Browsing Through Phrases

1. Press **(menu)**.
2. Use the arrow keys to highlight  and then press **(enter)** to view the English phrases.

Press  to view the French phrases.




You can also hold **(fn)** and press **(?)** to go straight to the Phrases menu in the same language as the lookup language.

3. Press **(f)** or **(j)** to highlight the category you want and press **(enter)**.


Press **(f)** or **(j)** to highlight a subcategory, if needed, and press **(enter)**.

 Translating Traveller's Phrases




4. Press **↑** or **↓** to highlight the phrase you want to translate and then press

 enter.



Searching for a Specific Phrase

 1. Press **effac** and press **lang** to select the look-up language, if needed.
2. Type a keyword for which you'd like to find a phrase (e.g., *ticket*).
3. Hold **fn** and press **?***.



4. If more than one phrase is found, press **↓** to scroll.

Using My Word List

You can save up to 40 words total, in both English and French, in My Word List for personal study or review. My Word List is saved between sessions unless your product is reset.

Adding Words from the Main Menu

1. Press **menu**.

 
Or you can press **leçon** and then press

enter.

2. Highlight  and then press **enter**.

You can also select  and press

enter.



3. Press **lang** to switch from the English to the French List, if needed.
4. Press **↑** or **↓** to highlight *Add a word* and press **enter**.
5. Type a word.
6. Press **enter** to add the word.
7. Press **effac** when done.

Adding Words from the Word Entry Screen

 
You can also add words to My Word List directly from the Word Entry screen.

Using My Word List

1. Press **(effac)**.
2. Press **(lang)** to choose the language of the word you want to add (e.g., French).
English words will be added to the English List;
French words will be added to the French List.
3. Type the word you want to add to your word list (e.g., *élégant*).

Enter a French words:

Press **(MENU)** for other options

4. Press **(leçon)**.
- 

Your selection is included in the menu item.

5. Press **(entrer)** to add the word.
6. Press **(effac)** to return to the Word Entry screen.

► Adding Highlighted Words

You can also add words to My Word List from definitions and correction lists. First highlight a word and then press **(leçon)**. Add "your word" will be highlighted. Press **(entrer)** to add the word.

Using My Word List

 
Viewing My Word List

1. Press **(menu)**.
Or you can press **(leçon)** and then press **(entrer)**.
2. Highlight  and then press **(entrer)**.

3. Press **(lang)** to switch to the English or French List, if needed.

English list: Empty (or French list: Empty) will be displayed if either is empty.

4. **English List (or French List)** will be highlighted. Press **(entrer)** to view the list.




This is a user list of one word.


5. Highlight a word on the list.
6. Press **(entrer)** to view its definition(s) or **(conj)** to view its inflections.

Using My Word List

Removing a Word from My Word List

1. Press **menu**.
Or you can press **leçon** and then press **entrer**.
2. Highlight  and then press **entrer**.
3. Press **lang** to switch to the English or French List, if needed.
4. Select *Delete a Word* and then highlight the word you want to delete.
5. Press **entrer** to delete that word.

Erasing My Word List

1. Press **menu**.
Or you can press **leçon** and then press **entrer**.
2. Highlight  and then press **entrer**.
3. Press **lang** to switch to the English or French List, if needed.
4. Select *Erase the List*.
Press **y** to erase the list or press **n** to cancel. Note: When you erase one list, the other list is not erased.

Playing the Games

You have seven fun games to choose from.

Changing Game Settings

Before you play, you can choose the source of the words, the skill level, the language, and whether or not graphics will be used.



1. Press **menu**, highlight  and press **entrer**.
2. Hold down **maj** and press  to highlight *Game Settings* and press **entrer**.

Words:	 All of them
Skill:	Beginner
Lang:	French
Graphics:	On

3. Use  or  to move  to *Words* or *Skill*.

 
Words chooses the source of the words: All of them, TOEFL® Test List, My Word List, or Enter your own.

Skill determines how easy or difficult a game is.

4. Use  or  to change the setting(s) you want.
5. Press **entrer** when done.

Selecting a Game

In the Games list, use **↑** or **↓** to move the highlight to the game of your choice and press **(enter)**.



Getting Help in the Games

During any game you can read instructions by pressing **(aide)**.

You can get a hint by holding **(maj)** and pressing **(?)** or reveal the game word by pressing **(?)**.

Note: If you reveal the game word, you lose the round.

Hangman

Hangman selects a mystery word and challenges you to guess it letter by letter. The letters of the mystery word are hidden by question marks. The number of guesses remaining is indicated by #s.

Type letters that you think are in the mystery word. If you are correct, the letter appears in place of the corresponding question mark(s). To see the translation of the game word, press **(enter)**. Press **(arr)** to return to the game.

Conjumania!™

Conjumania! teaches verb conjugations. It shows you an infinitive verb and asks you to enter a conjugation. Your conjugation must be spelled correctly, including accents. Type your guess and then press **(enter)**. To see the translation of the game word, press **(enter)**. Press **(arr)** to return to the game. To try a new conjugation, press **(espace)**.

Gender Tutor™

Gender Tutor asks you to guess the gender of French nouns. Press **m** for masculine and **f** for feminine. To see the translation of the game word, press **(enter)**. Press **(arr)** to return to the game.






Word Train™

In Word Train, you and the train take turns typing letters to form a word. Whoever types the last letter of the word wins. To view the letters you can type at your turn, hold **(maj)** and press **(?)**. Press **(?)** to end a round and reveal the word. To see the translation of the game word, press **(enter)**. Press **(arr)** to return to the game.


 
Guess the Word

In Guess the Word, you must type the missing letters in the mystery word. To read the definition of the mystery word, press **↓**, if





Playing the Games

needed. Press  or , if needed, to select a missing letter, and then type the letter that you think belongs there. Continue typing letters until the word is complete or no more tries are left. Or press ? to give up and reveal the word. To see the translation of the game word, press . Press  to return to the game. Press  to play a new round.

Word Auction™

In Word Auction, you try to bid on all the letters of a mystery word, before your cash runs out. The amount of each bid depends on the frequency of the letter. All bids will cost you whether correct or incorrect. If you guess the word by revealing all of the letters, your remaining cash is added to the next round. To see the translation of the game word, press . Press  to return to the game.


Word Blaster™

In Word Blaster you try to guess the mystery word before all its letters appear. As soon as you know the word press . Then type your guess and press . If you're wrong, Word Blaster asks you for another word. The speed at which the letters appear is set by the skill level. To see the translation of the game word, press . Press  to return to the game.

Transferring Words Between Books

This dictionary can transfer words with certain other BOOKMAN book cards. To send a word to another book, you must first install a book card in your product, and that book card must be able to send or receive words in the selected language. To learn if a book card can send or receive words, read its User's Guide.

1. Highlight a word in this dictionary.

To highlight a word in a dictionary entry, press  to start the highlight, and use the arrow keys to move the highlight to the word you want.


2. Hold and press .

3. Highlight the icon of the other book.

4. Press .

The word you highlighted appears in the other book.

5. Press again if needed to search for that word.

This unit may change operating modes due to Electrostatic Discharge. Normal operation of this unit can be re-established by pressing the reset key, , or by removing/replacing batteries.

Copyrights, Trademarks, and Patents

Model BFQ-3033: *Professeur d'anglais*

- Size: 5.9 x 4.2 x 0.6 cm
- Weight: 11.4 g

© 2000 Franklin Electronic Publishers, Inc., Burlington, N.J. 08016-4907 USA. All rights reserved.

© 1998 Larousse Bordas
All rights reserved.

FOR HOME OR OFFICE USE.

U.S. Patents 4,490,811; 4,830,618; 4,891,775;
5,113,340; 5,249,965; 5,203,705; 5,218,536;
5,295,070; 5,333,313; 5,153,831; 5,321,609;
5,396,606; 5,627,726

German Patents: M9409744.5;

Euro. Pat. 0 136 379

PATENTS PENDING.

ISBN 1-56712-601-4

Limited Warranty (outside U.S.)

This product, excluding batteries, is guaranteed by Franklin for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect due to faulty workmanship or materials.

Products purchased outside the United States that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault.

Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This guarantee does not affect the consumer's statutory rights.

FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Limited Warranty (U.S. only)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES AND LIMITED REMEDY

(A) LIMITED WARRANTY. FRANKLIN WARRANTS TO THE ORIGINAL END USER THAT FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF YOUR RECEIPT, YOUR FRANKLIN PRODUCT SHALL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP. THIS LIMITED WARRANTY DOES NOT INCLUDE DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, WILL BE REPAIR OR REPLACEMENT WITH THE SAME OR AN EQUIVALENT PRODUCT OF THE DEFECTIVE PORTION OF THE PRODUCT, AT THE SOLE OPTION OF FRANKLIN IF IT DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THE DEFECTS AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER LEGISLATED RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

(B) DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY. EXCEPT FOR THE LIMITED WARRANTIES EXPRESSLY RECITED ABOVE, THIS FRANKLIN IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY FRANKLIN AND DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. NEITHER FRANKLIN NOR OUR DEALERS OR SUPPLIERS SHALL HAVE ANY LIABILITY TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR DAMAGED DATA OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR THEY ARE OTHERWISE FORESEEABLE. WE ARE ALSO NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. OUR MAXIMUM AGGREGATE LIABILITY TO YOU, AND THAT OF OUR DEALERS AND SUPPLIERS, SHALL NOT EXCEED THE AMOUNT PAID BY YOU FOR THE FRANKLIN PRODUCT AS EVIDENCED BY YOUR PURCHASE RECEIPT. YOU ACKNOWLEDGE THAT THIS IS A REASONABLE ALLOCATION OF RISK. SOME STATES/COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

(C) WARRANTY SERVICE: UPON DISCOVERING A DEFECT, YOU MUST CALL FRANKLIN'S CUSTOMER SERVICE DESK, 1-800-266-5626, TO REQUEST A RETURN MERCHANDISE AUTHORIZATION ("RMA") NUMBER, BEFORE RETURNING THE PRODUCT (TRANSPORTATION CHARGES PREPAID) TO:

FRANKLIN ELECTRONIC PUBLISHERS, INC.
ATTN: SERVICE DEPARTMENT
ONE FRANKLIN PLAZA
BURLINGTON, NJ 08016-4907

IF YOU RETURN A FRANKLIN PRODUCT, PLEASE INCLUDE A NOTE WITH THE RMA, YOUR NAME, ADDRESS, TELEPHONE NUMBER, A BRIEF DESCRIPTION OF THE DEFECT AND A COPY OF YOUR SALES RECEIPT AS PROOF OF YOUR ORIGINAL DATE OF PURCHASE. YOU MUST ALSO WRITE THE RMA PROMINENTLY ON THE PACKAGE IF YOU RETURN THE PRODUCT, OTHERWISE THERE MAY BE A LENGTHY DELAY IN THE PROCESSING OF YOUR RETURN. WE STRONGLY RECOMMEND USING A TRACKABLE FORM OF DELIVERY TO FRANKLIN FOR YOUR RETURN.

Technical Support/Ayuda técnica /Technische Hilfe/Aiuto tecnico/Aide technique/Technische Steun	
Deutschland Österreich	Bitte schicken Sie dieses Produkt im Garantiefall mit Kaufbeleg an folgende Service-Adresse: Franklin Electronic Publishers (Deutschland) GmbH, Kapellenstrasse 13, D-85622 Feldkirchen. Den technischen Support erreichen Sie unter Tel. +49-89-90899-116. Bestellinformationen erhalten Sie unter Tel. +49-89-908990 oder im Internet unter www.franklin.com/de
Mexico	Para Soporte Técnico llamar al tel. 01 800 710 5938
USA & Canada	Technical Support is open from 9AM to 5PM EST Monday through Friday. Please call (609) 386-8997 and choose option 3, or fax (609) 387-1787 or visit us at www.franklin.com
All other countries Todos los otros países Alle anderen Länder Altri paesi Tous les autres pays Alle Overige Landen Todos os outros países Για όλες τις άλλες χώρες	www.franklin.com

Franklin®

Electronic Publishers

www.franklin.com