

QUEEN'S ENGLISH  
**Dictionary**  
& Thesaurus

**USER'S | GUIDE**

## License Agreement

---

READ THIS LICENSE AGREEMENT BEFORE USING ANY BOOKMAN CARD.

YOUR USE OF THE BOOKMAN CARD DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE BOOKMAN CARD AND YOUR PURCHASE PRICE WILL BE REFUNDED. BOOKMAN CARD means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

### LIMITED USE LICENSE

All rights in the BOOKMAN CARD remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use the BOOKMAN CARD on a single FRANKLIN BOOKMAN at a time. You may not make any copies of the BOOKMAN CARD or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the BOOKMAN CARD. You may not export or reexport, directly or indirectly, the BOOKMAN CARD without compliance with appropriate governmental regulations. The BOOKMAN CARD contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

# Contents

Welcome to the world of BOOKMAN! BOOKMAN is a powerful, portable electronic reference with a built-in book and a slot in the back for more books. With this *Dictionary & Thesaurus* you can find over 83,000 dictionary entries and

41,000 thesaurus entries with 496,000 synonyms, correct misspellings, save words to your User list, and play three fun, educational word games. To learn how to use other books, read their User's Guides.

|   |           |
|---|-----------|
| <b>Installing Cards</b> .....             | <b>4</b>  |
| <b>Selecting Books</b> .....              | <b>4</b>  |
| <b>Using the Colour Keys</b> .....        | <b>5</b>  |
| <b>Changing Settings</b> .....            | <b>5</b>  |
| <b>Viewing a Demonstration</b> .....      | <b>6</b>  |
| <b>Finding Definitions</b> .....          | <b>6</b>  |
| <b>Finding Words in Definitions</b> ..... | <b>7</b>  |
| <b>Correcting Misspellings</b> .....      | <b>7</b>  |
| <b>Reviewing Words</b> .....              | <b>8</b>  |
| <b>Finding a Letter</b> .....             | <b>8</b>  |
| <b>Finding a Series of Letters</b> .....  | <b>9</b>  |
| <b>Finding Synonyms</b> .....             | <b>9</b>  |
| <b>Finding Confusables™</b> .....         | <b>10</b> |
| <b>Highlighting Words</b> .....           | <b>11</b> |
| <b>Using the User List</b> .....          | <b>11</b> |
| <b>Sending Words</b> .....                | <b>13</b> |
| <b>Changing Game Settings</b> .....       | <b>13</b> |
| <b>Playing the Games</b> .....            | <b>14</b> |
| <b>Copyrights &amp; Patents</b> .....     | <b>16</b> |
| <b>Limited Warranty (U.S. only)</b> ..... | <b>17</b> |
| <b>Index</b> .....                        | <b>18</b> |

# Key Guide

## Function Keys

- CLEAR** Clears to *Enter your word*.
- MENU** Shows the main menus.
- THES** **(red)** Shows the synonym list(s).
- CONF** **(green)** Shows Confusables™ list.
- GAMES** **(yellow)** Shows the games list.
- LIST** **(blue)** Shows the User list menu.
- CARD** Exits the selected book.
- ON/OFF** Turns BOOKMAN on or off.

## ► Understanding the Colour Keys

The colour keys (red, green, yellow, and blue) perform the functions listed above only for the BOOKMAN book described in this User's Guide.





Other books have their own colour key functions, which are labelled on their cards and listed in their User's Guides. For more information, read "Using the Colour Keys."

\*Hold  while pressing the other key.








## Other Keys

- BACK** Backs up, erases letters, or stops a highlight.
- CAP** Shifts keys to type punctuation.
- ENTER** Enters a search, selects a menu item, or starts a highlight.
- HELP** Shows help messages.
- SPACE** Types a space or pages down.
- ? \*** Types a ? to stand for an unknown letter in a word; shifted, types an \* to stand for a series of unknown letters.

## Arrow Keys

-   Move up or down in text or lists; darken or lighten contrast at the Entry screen.
-   Move left or right.

 
## Star Key Combinations\*

-  + **CARD** Sends a word between books.
-  +  Shows the next match.
-  +  Shows the previous match.
-  +  Types a hyphen.

## Installing Cards

**Warning:** Never install or remove a book card when BOOKMAN is on. If you do, information that you entered in its built-in book, and in an installed book card, will be erased.

1. Turn **BOOKMAN** off.
2. Turn **BOOKMAN** over.
3. Align the tabs on the book card with the notches in the slot.

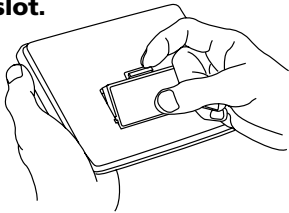

4. Press the card down until it snaps into place.

### ► Removing Cards

**Warning:** When you remove a card to install another, information that you entered into the removed card will be erased.

## Selecting Books

Once you have installed a book card in your BOOKMAN, you must select which book you want to use.

1. Turn **BOOKMAN** on.
2. Press **CARD**.



These are sample books.

3. Press **⇨** or **⇩** to highlight the book you want to use.



4. Press **ENTER** to select it.

 
### ► Resuming Where You Left Off

You can turn off BOOKMAN at any screen. When you turn BOOKMAN on again, the screen that you last viewed appears.

## Using the Colour Keys

The red, green, yellow, and blue keys on your BOOKMAN change functions according to which book is selected.

When the built-in book is selected, the colour keys function as labelled on the BOOKMAN keyboard. When a book card is selected, the colour keys function as labelled on that card.

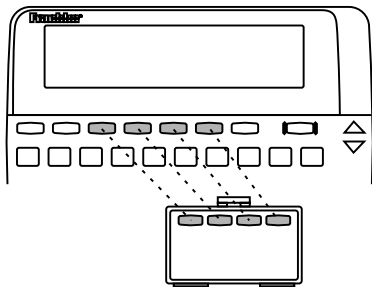

*Remember, the colour keys for BOOKMAN book cards function as labelled on their cards, not as on the keyboard.*

## Changing Settings

You can adjust the font size, shutoff time, and screen contrast. The font size changes the number of lines of text that appear on screen. The shutoff time is how long BOOKMAN stays on if you forget to turn it off.

1. Press **MENU**.
2. Press the arrow keys to highlight the Setup menu.
3. Highlight *Set Font*, *Set Shutoff*, or *Set Contrast*.



4. Press **ENTER**.
5. Highlight a setting.  
Or press  $\uparrow$  and  $\downarrow$  if you selected *Set Contrast*.
6. Press **ENTER** to select it.

### ► About Screen Illustrations

Some screen illustrations in this User's Guide may differ from what you see on screen. This does not mean that your BOOKMAN is malfunctioning.

## Viewing a Demonstration

Before you begin, you may want to see a brief demonstration of how to use this book. Simply install the book card and then follow these steps.

1. Press **CLEAR**.
2. Use the arrow keys to highlight the Setup menu.
3. Press **↓** to highlight **View Demo**.
4. Press **ENTER** to start the demonstration.
5. To stop the demonstration, press **CLEAR**.

### ► Help is Always at Hand

You can view a help message at virtually any screen by pressing **HELP**. Press **↓** to read it. To exit help, press **BACK** or **HELP**.

### ► Follow the Arrows

The flashing arrows on the right of the screen show which arrow keys you can press to move around menus or view more text.

## Finding Definitions

You can find definitions by typing a word at the Entry screen and then pressing **ENTER**. Try this example.

1. Press **CLEAR**.



This is the Entry screen.

2. Type a word (e.g., *acumen*).
3. Press **ENTER**.



4. Press **↓** or **SPACE** to move down.

### ► Browsing the Dictionary

While in a definition, hold **☆** and press **DN** to view the next dictionary definition. To view the previous one, hold **☆** and press **UP**. Dictionary entries are not always in alphabetical order.

## Finding Words in Definitions

*Search for a Word* lets you find all of the definitions in which a specific word appears.

1. Press **CLEAR**.
2. Press **MENU**.
3. Select **Search for a word from the Other** menu.
4. Type a word (e.g., *legal*).
5. Press **ENTER**.

**aforementioned**  
*adjective*  
chiefly in legal documents

6. Hold **☆** and press **▽** to view the next definition that includes your word.

**alienist** *noun* **alienists**  
*US*  
psychiatrist who specializes

To view the previous one, hold **☆** and press **△**.

7. Press **↓** or **SPACE** to move down.
8. Press **CLEAR** when finished.

## Correcting Misspellings

If you misspell a word, don't worry. It will be corrected automatically.

1. Type a misspelled word.

**ENTER** your word:  
noijj

To erase a letter, press **BACK**.

2. Press **ENTER**.

1 **knowlege** **THESE**  
2 neology  
3 Noels

3. Press **↓** to highlight a correction, if needed.
4. Press **ENTER** to view its dictionary entry.

To go back to the correction list, press **BACK**.

5. Press **CLEAR** when finished.



## Reviewing Words

The Path list lets you review the last 15 words you looked up. Your Path list is automatically saved between sessions until the batteries lose power.

### 1. Select **View Path list** from the **Other** menu.



Path list  
concave  
splendid

This is a sample Path list. If you haven't looked up any words, you see: *Path is empty.*

### 2. Press **↓** to highlight a word.

### 3. Press **ENTER** to define it.




splendid adjective  
1 magnificent  
2 brilliant

### 4. Press **THES** (red) to view a thesaurus entry or **CONF** (green) to view its Confusables, if any.

## Finding a Letter

If you are uncertain about a letter in a word, type a question mark in place of each unknown letter.

### 1. Type a word with ?'s.

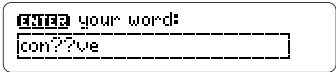

ENTER your word:  
con???ve


### 2. Press **ENTER**.



concave  
conive

### 3. Highlight a match.

### 4. Press **ENTER** to define it.

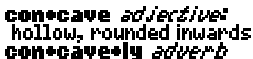

concave adjective  
hollow, rounded inwards  
conceavely adverb

### 5. Press **CLEAR** when finished.

### ► Spelling Finding Tips

You can also use ?'s to help solve crossword puzzles. For example, if the second letter of a five-letter word is *h* and its last letter is *w*. Enter *?h??w* to see possible answers.

## Finding a Series of Letters

To find prefixes, suffixes, and other parts of words, type an asterisk in a word. Asterisks stand for a series of letters. NOTE: If you type an asterisk at the beginning of a word, it may take a while to find the matching words.

### 1. Type a word with an \*.

ENTER your word#

pn\*1

To type an asterisk, hold **CAP** and press **?\***.

### 2. Press **ENTER**.

pneumatic  
pneumatics  
pneumonia

### 3. Highlight a match, if needed.

### 4. Press **ENTER** to define it.

pneumatic adjective  
of, worked by, inflated with  
wind or air

### 5. Press **BACK** to go back. Or press **CLEAR** when finished.

## Finding Synonyms

When you see **THES** flash once in the upper right of the screen, that word has a thesaurus entry.

1. Press **CLEAR**.
2. Type a word (e.g., *splendid*).
3. Press **THES** (red).

splendid  
admirable  
brilliant

This is the first synonym list.

### 4. Press **↓** or **SPACE** to move down.

heroic  
outstanding  
rare

### 5. Hold **☆** and press **→** to view the next synonym list.

splendid **THES**  
costly  
dazzling

To return to the previous synonym list, hold **☆** and press **←**.

### 6. Press **CLEAR** when finished.

## Finding Synonyms

### ► Understanding Dictionary Entries

In dictionary entries, the headword appears in bold with hyphenation points followed by its part of speech. NOTE: If the word you are searching for is grouped under a different headword, you'll go to the middle of the definition.

### ► Understanding Synonym Lists

Synonym lists start with your search word and then list the synonyms that have similar meanings.

### ► Looking Up a Word from a List

If you see a word in a synonym or correction list that you want to define, press **ENTER** and then use the arrow keys to highlight the word. Next, press **ENTER** when the word you want is highlighted to find its definition.

## Finding Confusables™

Confusables are homonyms and spelling variants that are easy to confuse. If a word has Confusables, **CONF** will flash once in the upper right of the screen.

**1. Type a word (e.g., rein).**

**2. Press **ENTER**.**

**3. Press **CONF** (green).**

Confusables come with identifying words.

**4. Press **ENTER** and then use the arrow keys to highlight a word.**

rein: harness  
rain: precipitation  
reign: rule

**5. Press **ENTER** to define it, or press **THES** (red) to view its synonym list(s).**

**harness** noun har-  
nesses:  
1 equipment for attaching

**6. Press **CLEAR** when finished.**

## Highlighting Words

Another way to look up words is by highlighting them in dictionary definitions, synonym or correction lists. Then you can find their definitions, thesaurus entries, Confusables, or add them to your User list.

1. At any text or list, press **ENTER** to start the highlight.



brocard *adjective*  
obstinate; contrary

To turn the highlight off, press **BACK**.

2. Use the arrow keys to highlight a word.



obstinate *adjective*  
1 stubborn  
2 self-willed

3. Do one of the following:

To...

define the word

view a synonym list

view Confusables

add word to User list

Press...

**ENTER**

**THES** (red)

**CONF** (green)

**LIST** (blue)

## Using the User List

You can create a User list of approximately 35 words. You can even add words to your User list that are not in this dictionary. Here's how to add and to view a word.

1. Press **LIST** (blue) to view the User list menu.



View list: \*\* Empty \*\*  
Add word  
Delete word


If you haven't added words to your User list, *View list: \*\*Empty\*\** appears.

2. Select **Add word**.
3. Type a word (e.g., *restive*).



**ENTER** list word:  
restive

4. Press **ENTER** to add the word.
5. Select **View list: 1 word**.



restive **THES**

This is a User list of one word.

## Using the User List

---

### ► Adding Highlighted Words

At any text, you can highlight a word and add it to your User list.

1. **At text, press **ENTER** to start the highlight.**
2. **Highlight a word.**
3. **Press **LIST** (blue).**
4. **Select *Add "your word"*.**

### ► Adding Words Not Found in This Dictionary

When you add a word not in this dictionary, you're given three options: *Cancel*, *Add anyway*, or *Correction candidate(s)*. Select an option. **Caution:** Adding words not in this dictionary uses considerably more memory than adding words that are. If you add only words that are not in the dictionary, your User list may hold as few as 10 words.

## Using the User List

---

You can delete one or all the words in your User list. Here's how.

### ► Deleting One Word

1. **Press **LIST** (blue).**
2. **Select *Delete word*.**
3. **Highlight a word on the list.**
4. **Press **ENTER** to delete it.**
5. **Press **CLEAR** when finished.**

### ► Deleting Your User List

1. **Press **LIST** (blue).**
2. **Select *Erase list*.**
3. **Press **Y** to erase the entire list. Or press **N** to cancel.**

## Sending Words

This BOOKMAN dictionary can send words to and receive words from certain other BOOKMAN books.

To send a word, you must first install a card in your BOOKMAN, and that card must be able to send or receive words. To learn if a card can send or receive words, read its User's Guide.

### 1. Highlight a word in this book.

**circus** *noun* **circuses**:  
1 (performance of) travel-  
ling group of **acrobats**.

To highlight a word in a list, press the arrow keys. To highlight a word in text, press **ENTER** and then press the arrow keys.

2. Hold **☆** and press **CARD**.
3. Highlight the other book.
4. Press **ENTER**.  
The word that you highlighted appears in the other book.
5. Press **ENTER** to look up the word.

## Changing Game Settings

You can change the game settings at any time. Each setting applies to all the games.

1. Press **MENU**.
2. Press **←** to highlight the Game menu.



A screenshot of a menu interface. At the top, there are three tabs: "GAME", "SETUP", and "OTHER". Below these tabs, the "WORD LIST" option is highlighted with a dark background. Underneath "WORD LIST", the "WORD LENGTH" option is also visible.

3. Highlight a setting.
4. Press **ENTER** to select it.

### ► About Game Settings

*Word List* lets you pick which words you'll play the games with. If you select *Type Them in*, you'll need to type in words after you select a game.

*Word Length* lets you pick how many letters will be in the words (3-13).

*Skill Level* lets you select the level of difficulty.

## Playing the Games

Now that you have the games set, let's play.

1. Press **GAMES** (yellow).
2. Press **↑** or **↓** to highlight a game.
3. Press **ENTER** to start it.



```
??????????
##### 9
make a letter guess
```

4. Press **SPACE** to start a new round.

### ► Keeping Score

Your score automatically appears after each round of Hangman and Word Train until you exit the game.



```
flashcube
irt Won: 1 Lost: 0
make a letter guess
```

## Playing the Games

### Hangman

Hangman challenges you to guess a mystery word, indicated by ?'s, one letter at a time. The number of guesses you can make appears to the right of the #'s. For a hint hold **CAP** and press **?\***. Or press **?\*** to end the round. NOTE: If you ask for a hint, you will lose the round. Press **SPACE** to start a new round. Press **ENTER** to view the definition of the word. Press **BACK** to exit a game and view the games list.

### Anagrams

Anagrams challenges you to find all of the words that can occur within a selected word. Each letter can only be used as many times as it appears in the selected word. Each anagram must be a specified minimum length. This will flash on the screen before each game. The number of possible anagrams is shown on the right side of the screen.

## Playing the Games

Type an anagram and then press **ENTER**. Use the arrow keys to view anagrams you've already entered. Hold **CAP** and press **?\*** to shuffle the letters in the selected word. Press **?\*** to end a round and reveal the remaining anagrams. Highlight a word, and then press **ENTER** to see its dictionary definition. Press **BACK** to exit Anagrams.

### Word Train

All aboard the Word Train spelling game! You and the train take turns typing letters to form a word. Whoever types the last letter wins. To view the letters you can type at your turn, hold **CAP** and press **?\***. Or press **?\*** to end a round and reveal the word. Press **ENTER** to view the dictionary definition of the word.

This unit may change operating modes due to Electro-static Discharge. Normal operation of this unit can be re-established by pressing the reset key, **ON/OFF**, or by removing/replacing batteries.

 
## Card Care

- **Do not touch the metal contacts on the cards.**

**Caution:** Touching these electrical contacts with statically charged objects, including your fingers, could erase information entered in a book card or built-in book.



- **Do not put excessive pressure on the cards.**

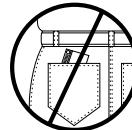

- **Do not expose the cards to heat, cold, or liquids.**





## Resetting BOOKMAN

---

If the BOOKMAN keyboard fails to respond, or if its screen performs erratically, first press **CLEAR** and then press **ON/OFF** twice. If nothing happens, follow the steps below to reset it.

**Warning:** Pressing the reset button with more than very light pressure may permanently disable your BOOKMAN. In addition, resetting BOOKMAN erases settings and information entered into its built-in book, and in an installed card.

**1. Hold **CLEAR** and press **ON/OFF**.**

If nothing happens, try Step 2.

**2. Use a paperclip to gently press BOOKMAN's reset button.**

### ► Troubleshooting BOOKMAN

- Make sure your book card, if any, is installed correctly.
- Check that the card's metal contacts are dirt-and dust-free.

## Copyrights & Patents

---

**Model: DMQ-2016**

- size: 5.9 x 4.2 x 0.6 cm
- weight: 0.4 oz.

© 1995-1999 Franklin Electronic Publishers, Inc.,  
Burlington, NJ 08016-4907 USA.  
All rights reserved.

© 1987-1988 Wm. Collins Sons & Co., Ltd. All rights reserved.

**FCC Notice:** Complies with the limits for a Class B computing device pursuant to Subpart B of part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

U.S. Patents 4,490,811; 4,830,618; 4,891,775;  
4,982,181; 5,113,340; 5,153,831; 5,203,705; 5,218,536;  
5,249,965; 5,295,070; 5,321,609; 5,333,313; European  
Patent 0 136 379; German Patent Reg. No. M9409744.5.  
Pat. Pend. ISBN 1-56712-192-6

### Limited Warranty (outside U.S.)

This product, excluding batteries, is guaranteed by Franklin for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect due to faulty workmanship or materials.

Products purchased outside the United States that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This guarantee does not affect the consumer's statutory rights.

# Limited Warranty (U.S. only)

---

## LIMITED WARRANTY, DISCLAIMER OF WARRANTIES AND LIMITED REMEDY

(A) LIMITED WARRANTY. FRANKLIN WARRANTS TO THE ORIGINAL END USER THAT FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF YOUR RECEIPT, YOUR FRANKLIN PRODUCT SHALL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP. THIS LIMITED WARRANTY DOES NOT INCLUDE DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, WILL BE REPAIR OR REPLACEMENT WITH THE SAME OR AN EQUIVALENT PRODUCT OF THE DEFECTIVE PORTION OF THE PRODUCT, AT THE SOLE OPTION OF FRANKLIN IF IT DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THE DEFECTS AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER LEGISLATED RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

(B) DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY. EXCEPT FOR THE LIMITED WARRANTIES EXPRESSLY RECITED ABOVE, THIS FRANKLIN IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY FRANKLIN AND DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. NEITHER FRANKLIN NOR OUR DEALERS OR SUPPLIERS SHALL HAVE ANY LIABILITY TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR DAMAGED DATA OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR THEY ARE OTHERWISE FORESEEABLE. WE ARE ALSO NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. OUR MAXIMUM AGGREGATE LIABILITY TO YOU, AND THAT OF OUR DEALERS AND SUPPLIERS, SHALL NOT EXCEED THE AMOUNT PAID BY YOU FOR THE FRANKLIN PRODUCT AS EVIDENCED BY YOUR PURCHASE RECEIPT. YOU ACKNOWLEDGE THAT THIS IS A REASONABLE ALLOCATION OF RISK. SOME STATES/COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

(C) WARRANTY SERVICE. UPON DISCOVERING A DEFECT, YOU MUST CALL FRANKLIN'S CUSTOMER SERVICE DESK, 1-800-266-5626, TO REQUEST A RETURN MERCHANDISE AUTHORIZATION ("RMA") NUMBER, BEFORE RETURNING THE PRODUCT (TRANSPORTATION CHARGES PREPAID) TO:

FRANKLIN ELECTRONIC PUBLISHERS, INC.  
ATTN: SERVICE DEPARTMENT  
ONE FRANKLIN PLAZA  
BURLINGTON, NJ 08016-4907

IF YOU RETURN A FRANKLIN PRODUCT, PLEASE INCLUDE A NOTE WITH THE RMA, YOUR NAME, ADDRESS, TELEPHONE NUMBER, A BRIEF DESCRIPTION OF THE DEFECT AND A COPY OF YOUR SALES RECEIPT AS PROOF OF YOUR ORIGINAL DATE OF PURCHASE. YOU MUST ALSO WRITE THE RMA PROMINENTLY ON THE PACKAGE IF YOU RETURN THE PRODUCT, OTHERWISE THERE MAY BE A LENGTHY DELAY IN THE PROCESSING OF YOUR RETURN. WE STRONGLY RECOMMEND USING A TRACKABLE FORM OF DELIVERY TO FRANKLIN FOR YOUR RETURN.

# Index

---

- ?\* key 8, 14
- Anagrams game 14
- Arrow keys 6
- Changing Bookman's settings 5
- CONF message 10
- Confusables, finding 10
- Correcting misspellings 7
- Games
  - changing settings 13
  - playing 13
- Hangman game 14
- Help, finding 6
- Highlighting words 11
- Messages
  - add anyway 12
  - cancel 12
  - correction list 12
  - path is empty 8
  - type them in 13
  - view list: empty 11
- Misspellings, correcting 7
- Path list 8
- Reviewing words 8
- Searching for words 7
- Shutoff
  - changing 5
  - setting 5
- Spelling finding tips 8
- STAR key
  - combinations 3
  - with CARD 13
  - with DN 3, 7, 9
  - with UP 3, 7, 9
- Synonym lists, understanding 10
- THES message 9
- User List
  - adding words not in dictionary 12
  - viewing list 11
- Word Train game 15

**Franklin**®

Electronic Publishers

[www.franklin.com](http://www.franklin.com)