

**Franklin®**

**BOOKMAN®**

---

**ELECTRONIC BOOK CARD**

Concise Columbia  
Encyclopedia

**USER'S GUIDE**

**ENC-2046**

## License Agreement

---

READ THIS LICENSE AGREEMENT BEFORE USING ANY BOOKMAN ELECTRONIC BOOK.

YOUR USE OF THE BOOKMAN ELECTRONIC BOOK DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE BOOKMAN ELECTRONIC BOOK AND YOUR PURCHASE PRICE WILL BE REFUNDED. BOOKMAN ELECTRONIC BOOK means the software product, hardware, and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

### LIMITED USE LICENSE

All rights in the BOOKMAN ELECTRONIC BOOK remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use the BOOKMAN ELECTRONIC BOOK on a single FRANKLIN BOOKMAN at a time. You may not make any copies of the BOOKMAN ELECTRONIC BOOK or of the preprogrammed data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the BOOKMAN ELECTRONIC BOOK. You may not export or reexport, directly or indirectly, the BOOKMAN ELECTRONIC BOOK without compliance with appropriate governmental regulations. The BOOKMAN ELECTRONIC BOOK contains Franklin's confidential and propriety information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

# Contents

<b>Introduction</b> .....	<b>2</b>
<b>Key Guide</b> .....	<b>2</b>
<b>Installing a Book Card</b> .....	<b>4</b>
<b>Selecting a Book</b> .....	<b>4</b>
<b>Using the Color Keys</b> .....	<b>5</b>
<b>Changing the Settings</b> .....	<b>5</b>
<b>Viewing a Demonstration</b> .....	<b>6</b>
<b>Finding Encyclopedia Articles</b> .....	<b>6</b>
<b>Searching for Words</b> .....	<b>7</b>
<b>Highlighting Search Words</b> .....	<b>9</b>
<b>Using Cross-References</b> .....	<b>10</b>
<b>Locating Articles</b> .....	<b>10</b>
<b>by Categories</b> .....	<b>10</b>
<b>Using Categories</b> .....	<b>12</b>
<b>with Searches</b> .....	<b>12</b>
<b>Using Bookmarks</b> .....	<b>12</b>
<b>Sending a Word Between Books</b> .....	<b>13</b>
<b>Resetting Your BOOKMAN</b> .....	<b>14</b>
<b>Book Card Care</b> .....	<b>14</b>
<b>Specifications</b> .....	<b>15</b>
<b>Limited Warranty (U.S. only)</b> .....	<b>15</b>
<b>Index</b> .....	<b>16</b>

## Introduction

---

Welcome to the world of BOOKMAN®!  
With your new ENC-2046 you can carry and read the *Concise Columbia Encyclopedia* anywhere.

You can also search for words, locate encyclopedia articles by category, combine searches and categories, and even add your own bookmarks to quickly find the articles you read most often.

Read this User's Guide to learn how.

### ► About Screen Illustrations

Some screen illustrations in this User's Guide may differ from what you see on screen. This doesn't mean that your BOOKMAN is malfunctioning.

## Key Guide

---

### Color Keys

- MORE** **(red)** Expands a word search.
- MARK** **(green)** Adds or removes a bookmark, or selects a group of subfilters.
- LOC** **(yellow)** Displays the Locate menu.
- LIST** **(blue)** Displays a list of bookmarks, adds and removes bookmarks

### ► Understanding the Color Keys

The color keys (red, green, yellow, and blue) perform the functions listed above only for the book described in this User's Guide.

Other BOOKMAN books have their own color key functions, which are labeled on their keyboards or book cards. To learn more, read "Using the Color Keys."

## Key Guide

### Other Keys

- BACK** Erases a letter, backs up, or turns off the highlight in an article.
- CAP** Shifts the keys to type capitals or punctuation.
- CARD** Exits the book you are reading.
- CLEAR** Clears your entries.
- ENTER** Enters search words, selects a menu item, or starts a highlight.
- HELP** Displays help messages.
- MENU** Displays the main menus.
- ON/OFF** Turns BOOKMAN on or off.
- ? \*** At an article, displays the Outline location. At a menu, displays a full menu item. Shifted, types an \* to stand for a series of letters.
- SPACE** Types a space, or pages down.

### Direction Keys



Moves in the indicated direction, or moves the cursor or highlight.



Pages down or up.

### Key Combinations\*



Goes to the main menu from a submenu.



Highlights cross-references or bookmarks in articles.



Goes to the next or previous article or word search match.



Types numbers.



Goes to the bottom or top of menus. In entries with multiple sections, goes to the next or previous section.




In an article, goes to the top of an article.

\* Hold the first key while pressing the other key.

## Installing a Book Card

**Warning:** Never install or remove a book card while your BOOKMAN is turned on. If you do, information that you've entered in the built-in book, as well as in any other installed book cards, will be erased.

1. Turn your BOOKMAN off.
2. Turn your BOOKMAN over.
3. Align the tabs of the book card with the notches in the slot.

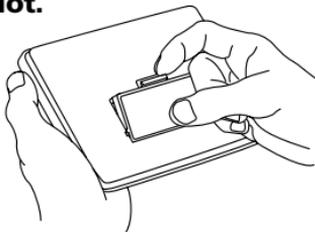

4. Press the book card down until it snaps into place.

### ► Removing Book Cards

**Warning:** When you remove a book card to install another, information that you entered in the removed book card will be erased.

## Selecting a Book

Once you have installed a book card in your BOOKMAN, you can select which book you want to use.

1. Turn your BOOKMAN on.
2. Press **CARD**.



These are sample books.

3. Press **⇨** or **⇧** to highlight the book you want to use.



4. Press **ENTER** to select it.

### ► Resuming Where You Left Off

You can turn off your BOOKMAN at any time. When you turn your BOOKMAN on again, the screen that you last viewed reappears.


### ► Copyright Information

To see copyright information about this encyclopedia, highlight *Copyright* on the Setup menu and press **ENTER**.

## Using the Color Keys

The red, green, yellow, and blue keys on the top row of your BOOKMAN change their functions according to which book you have selected.

If you have selected the built-in book, the color keys function as labeled on the BOOKMAN keyboard. If you have selected a book card, the color keys function as labeled on that card.

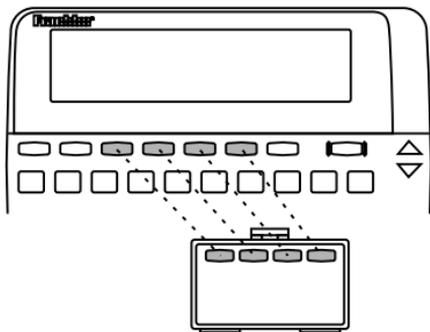

Remember, when you've selected a book card, the color keys function as labeled on that card, not as on the keyboard.

## Changing the Settings

You can adjust the type size, shutoff time, and screen contrast of this book. The shutoff time is how long your BOOKMAN stays on if you forget to turn it off. Screen contrast refers to how light or dark the screen is.

1. Press **CLEAR**.
2. Use **←** or **→** to highlight the **Setup** menu.
3. Press **↓** to highlight **Set Type Size, Set Shutoff, or Set Contrast**.



The slanted arrow indicates a submenu.

4. Press **ENTER**.
5. Press **↑** or **↓** to highlight a setting.

If you select *Set Contrast*, press **↑** or **↓** repeatedly to make the screen darker or lighter.

To leave the settings unchanged, press **BACK**.

6. Press **ENTER** to select it.

## Viewing a Demonstration

Before you start using your new book card, you may want to see a brief demonstration of what it can do.

1. Press **MENU**, if needed.
2. Use the arrow keys to highlight the Setup menu.
3. Press **↓** to highlight *View Demo*.
4. Press **ENTER** to start the demonstration.
5. To stop the demonstration at any time, press **CLEAR**.

### ▶ Help is Always at Hand

You can view a help message at virtually any time by pressing **HELP**. Press **↓** or **DN** to read the help. Press **BACK** to exit the message.

To read about how to use the keys, select *Tutorial* from the Setup menu.

## Finding Encyclopedia Articles


The Articles menu lists all the articles in this encyclopedia alphabetically by title. Finding an article is as easy as typing the name of its title.

1. Press **CLEAR**.



The Articles menu is highlighted.

2. Start typing an article title. For example, type *zebra*.

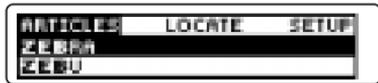


You don't need to type capitals.

To undo a letter, press **BACK**.

To display a full menu title, press **?\***.

You can also find article titles by using the Direction keys at the Article menu.

3. When the title is highlighted, press **ENTER** to see its article.

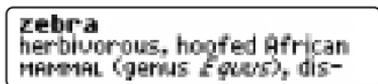

## Finding Encyclopedia Articles

4. Press **↓**, **DN**, or **SPACE** to scroll down to read the text.
5. Hold **☆** and press **DN** to view the next encyclopedia article.  
Hold **☆** and press **UP** to view the previous encyclopedia article.
6. Press **BACK** to go back to the Articles menu.
7. Press **CLEAR** when finished.

### ► What Article Are You Reading?

When you're reading an encyclopedia article, you can view its title, or Outline location, by pressing **?\***.



Press **BACK** to go back to the article.


## Searching for Words

You can search for words occurring in articles and their titles. Each occurrence that you find is called a match.

1. Press **CLEAR**.
2. Press **LOC** (the yellow key).



3. Press **ENTER** to select **Go to Word Search**.
4. Type up to five words. For example, type *russian czars*.

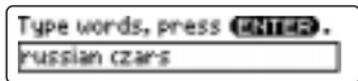

You don't need to type capitals, but if you want to, hold **☆** and press a letter key.

To erase a letter, press **BACK**.

To type a space, press **SPACE**.

5. Press **ENTER** to search.




## Searching for Words

### 6. Highlight a title and then press

**ENTER** to view its article.

### 7. To go to the beginning of the article, hold **CAP** and press **↑**.

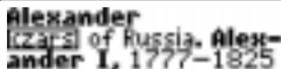

Alexander  
Czar of Russia, Alex-  
ander I, 1777-1825

The matches are boxed. You may have to scroll down to see them.

### 8. Hold **☆** and press **⏮** repeatedly to view the next matches.

### 9. Press **CLEAR** to clear your search.

#### ► If You Misspell a Word

If you enter a misspelled search word, a list of corrections appears automatically. Highlight a correction and press **ENTER** to search for it.

#### ► Finding Incomplete Words

If you're not sure which form of a word to search for, type an asterisk in place of letters in the word (e.g., *psych\**). (To type an asterisk, hold **CAP** and press **?**.) Then press **ENTER**.

Next, highlight a complete word and press **ENTER** to search for it.

## Searching for Words

### ► Understanding Searches

When you search for words, the encyclopedia searches first for matches of the words in the titles of articles. If no matches are found in titles, it automatically searches for matches in the articles themselves. If no exact matches are found in articles, the encyclopedia then searches for synonyms and related words.

Searches of more than one word find matches regardless of the order or proximity of the words. For example, if you search for *space travel*, you will find matches that have the words *travel* and *space* in the text of their articles.

### ► Expanding Your Searches


To find more matches, press **MORE** (the red key) up to three times after entering your word search. When you press **MORE** (red), your word search expands to include matches in articles or synonyms and related words, if they weren't already found.

## Highlighting Search Words

You can also search for words by highlighting them in articles. Then you can find their matches in other articles. Try this example.


1. Press **CLEAR**.
2. Highlight *Irrawaddy* and then press **ENTER**.

To learn how, read "Finding Articles."

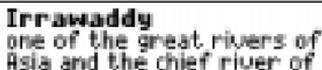

**Irrawaddy**  
one of the great rivers of  
Asia and the chief river of


3. Press **ENTER** again to start the highlight.

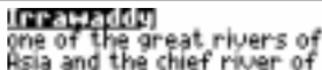

**Irrawaddy**  
one of the great rivers of  
Asia and the chief river of

You can turn off the highlight by pressing **BACK**.

4. Use the arrow keys to highlight a word. For example, highlight *Asia*.

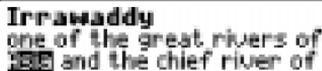

**Irrawaddy**  
one of the great rivers of  
**Asia** and the chief river of

## Highlighting Search Words

5. Press **ENTER** to search for it.



**5 ARTICLES** LOCATE SETUP  
ASIA  
ASIA RIVERS

6. To search for more articles, press **MORE** (red).
7. Highlight an article and press **ENTER** to select it.
8. Hold **☆** and press **DN** repeatedly to view the next matches. To view a previous match, hold **☆** and press **UP**.
9. Press **CLEAR** when finished.

### ► Moving around your encyclopedia

When the text of an encyclopedia article is on screen, you can easily use the Direction keys to scan and read the surrounding text.

**To...**  
scroll down or up  
page down or up  
page down  
go to the next  
or previous article

**Press...**  
↓ or ↑  
DN or UP  
SPACE  
☆ + DN  
or UP

## Using Cross-References

Cross-references appear in articles as words in all capital letters. Each cross-reference is the title of another encyclopedia article. Try this example.

### 1. On the Articles menu, highlight **thunder**.

To learn how, read "Finding Articles."

### 2. Press **ENTER**.

### 3. Hold **☆** and press **ENTER** to highlight a cross-reference.



thunder  
sound produced when a flash  
of LIGHTNING passes through

Or press **ENTER** and use the direction keys to highlight a cross-reference.

To turn off the highlight, press **BACK**.

### 4. Press **ENTER** to go to the cross-referenced article.

### 5. Press **BACK** to go back to the original article.

### 6. Press **CLEAR** when finished.

## ► Cross-references in Small Type

Cross-references are noted by an XREF marker ( **XREF** ) when you are using the small type size.

## Locating Articles by Categories

You can search for encyclopedia articles by category. The categories are *Article Type* (persons, places, and things), *Location*, *Subject*, and *Time Period*.


You can use filters and subfilters, which limit the scope of a search, to locate articles, as shown in the example below.

### 1. Press **LOC** (yellow).

The Locate menu is highlighted.

### 2. Press **↓** to highlight **Article Type** and then press **ENTER** to select it.

### 3. Press **ENTER** to select **Persons**.

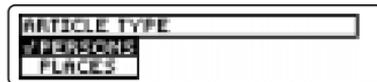

ARTICLE TYPE  
PERSONS  
PLACES  
THINGS

A check marks the selected filter.

You can remove the check mark by pressing **ENTER** again.

### 4. Press **LOC** (yellow) or **BACK** to go to the Locate menu.

### 5. Highlight **Location** and then press **ENTER** to select it.

The slanted arrow indicates subfilters.

## Locating Articles by Categories

### 6. Select *Sub-Saharan Africa*.



### 7. Press **(LOC)** (yellow) or **(BACK)**.

### 8. Select *Subject*.

### 9. Select *Social Sciences*.

### 10. Select *Politics*.



### 11. Press **(←)** to view the matches.

### 12. Highlight a title (e.g., *Mandela, Nelson Rolihlahla*).



Type the title or use the Direction keys to scroll down to it.

### 13. Press **(ENTER)** to view its article.

### 14. Press **(CLEAR)** to clear the filters or select *Clear All Filters* from the Locate menu.

## Locating Articles by Categories

### ► MARKing Filters

Many filters have subfilters, indicated by a slanted arrow. For example, the Location filter under the Article Type category has 10 subfilters.

To select all its subfilters at once, highlight a filter and then press **(MARK)** (the green key). To deselect all its subfilters, press **(MARK)** (green) again. Note: You cannot MARK an entire category.

### ► Understanding Filters

When you select more than one filter from a category, your selections are related by **or**. For example, if you select *Persons* and *Places* from the Article Type category, all the articles about persons **or** places will be found.

However, when you select filters from more than one category, your selections are related by **and**. For example, if you select *Persons* from the Article Type category and *1980's* from the Time Period category, only articles about persons **and** the 1980's will be found.

## Using Categories with Searches

To fine-tune your searches, you can select filters after entering search words. Or you can select filters and then search for words. Try this example.

### 1. Select **Go To Word Search from the Locate menu.**

To learn how, read “Searching for Words.”

### 2. Type **war** and then press **ENTER**.



### 3. Use the arrow keys to highlight the **Locate** menu and select **Location**.

### 4. Press **ENTER** to select **Americas**.

### 5. Select **Latin America**.

### 6. Press **↶** to view the matches.



These articles are about wars and Latin America.

### 7. Select an article to view.

### 8. Press **CLEAR** when finished.


## Using Bookmarks

### Adding a Bookmark

You can personalize your encyclopedia by adding bookmarks to articles. Then you can use your bookmarks for quick reference. The **BM** shows the placement of the bookmark. Note: You can add multiple bookmarks in a single article.

### 1. Select an encyclopedia article.

### 2. Press **MARK** (green) to place a bookmark.

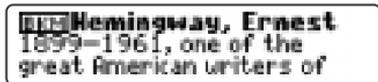

You can also press **LIST** (the blue key) and then press **ENTER** to add a bookmark.

## Using Bookmarks

### Finding and Viewing a Bookmark

Once you've added bookmarks, it's easy to find or remove them.

1. Press **CLEAR**.
2. Press **LIST** (blue).




This is a sample bookmark list. Bookmarks appear in alphabetical order.

3. Use **↓** to highlight a bookmark.
4. Press **ENTER** to view the article in which the bookmark is placed.

### Removing a Bookmark

1. Find a bookmark in an article.

To learn how, read "Finding and Viewing a Bookmark."

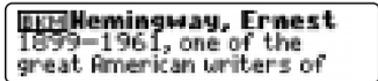

2. Press **MARK** (green) to remove a bookmark.


Or press **LIST** (blue) and then press **ENTER** to remove the last bookmark you placed.

## Sending a Word Between Books

You can look up words from this book in certain other BOOKMAN books, and vice versa.

To send or receive a word to or from another book, you must have installed a book card in your BOOKMAN that is able to send or receive words, too. To learn if a book card can send or receive words, read its User's Guide.

1. Highlight a word in the text of an article.

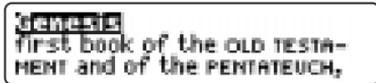

To highlight a word in text, press **ENTER** and then press the arrow keys.

2. Hold **☆** and press **CARD**.
3. Highlight the other book.



4. Press **ENTER**.  
The word that you highlighted appears in the other book.
5. If needed, press **ENTER** to look up the word.

## Resetting Your BOOKMAN

If the BOOKMAN keyboard fails to respond, or if its screen performs erratically, first press **CLEAR** and then press **ON/OFF** twice. If nothing happens, follow the steps below.

**Warning:** Pressing the reset button with more than very light pressure may permanently disable your BOOKMAN. In addition, resetting BOOKMAN erases settings and information entered into its built-in book and in any installed book card.

**1. Hold **CLEAR** and press **ON/OFF**.**

If nothing happens, try Step 2.

**2. Use a paper clip to gently press reset button on BOOKMAN.**

The reset button is recessed in a pin-sized hole on the back of the BOOKMAN. Look for it on the battery cover or near the book card slot.

This unit may change operating modes due to Electro-static Discharge. Normal operation of this unit can be re-established by pressing the reset key, **ON/OFF**, or by removing/replacing batteries.

## Book Card Care

- **Do not touch the metal contacts on the book cards.**

**Caution:** Touching these electrical contacts with statically charged objects, including your fingers, could erase information entered in a book card or built-in book.



- **Do not put excessive pressure on the book cards.**



- **Do not expose the book cards to heat, cold, or liquids.**



# Specifications

## **Model: ENC-2046**

*The Concise Columbia Encyclopedia*

- size: 5.9 x 4.2 x 0.6 cm
- weight: 0.4 oz

© 2000 Franklin Electronic Publishers, Inc., Burlington, NJ 08016-4907 U.S. All rights reserved.

© 1994 Columbia University Press.

This work is based on *The Concise Columbia Encyclopedia 3rd Edition* © 1994. By permission of Columbia University Press™.

**FCC Notice:** Complies with the limits for a Class B computing device pursuant to Subpart B of part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

U.S. Patents 4,490,811; 5,153,831;  
5,113,340; 5,321,609; 4,830,618;  
5,218,536; 5,396,606.

Deutsch Patents M 9409743.7 and  
M 9409744.5

European Patent 0 136 379.

Patents Pending

ISBN 1-56712-297-3

# Limited Warranty (U.S. only)

FRANKLIN warrants to you that the BOOKMAN PRODUCT will be free from defects in materials and workmanship for one year from purchase. In the case of such a defect in your BOOKMAN PRODUCT, FRANKLIN will repair or replace it without charge on return, with purchase receipt, to the dealer from which you made your purchase or Franklin Electronic Publishers, Inc., One Franklin Plaza, Burlington, New Jersey 08016-4907, within one year of purchase. Alternatively, FRANKLIN may, at its option, refund your purchase price.

Data contained in the BOOKMAN PRODUCT may be provided under license to FRANKLIN. FRANKLIN makes no warranty with respect to the accuracy of data in the BOOKMAN PRODUCT. No warranty is made that the BOOKMAN PRODUCT will run uninterrupted or error free. You assume all risk of any damage or loss from your use of the BOOKMAN PRODUCT. This warranty does not apply if, in the sole discretion of FRANKLIN, the BOOKMAN PRODUCT has been tampered with, damaged by accident, abused, misused, or misapplication, or as a result of service or modification by any party, including any dealer, other than FRANKLIN. This warranty applies only to products manufactured by or for FRANKLIN. Batteries, corrosion, or battery contacts and any damage caused by batteries are not covered by this warranty. NO FRANKLIN DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY ADDITIONAL WARRANTY IN THIS REGARD OR TO MAKE ANY MODIFICATION OR EXTENSION OF THIS EXPRESS WARRANTY.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES, WRITTEN OR ORAL, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. YOUR SOLE AND EXCLUSIVE REMEDY SHALL BE FRANKLIN'S OBLIGATION TO REPLACE OR REFUND AS SET FORTH ABOVE IN THIS WARRANTY. Some States do not allow the exclusion of implied warranties, or limitations on how long a warranty lasts. This warranty gives you specific rights; you may also have additional rights which vary from State to State. This warranty shall not be applicable to the extent that enforcement of any provision may be prohibited by applicable law.

FRANKLIN SHALL IN NO EVENT BE LIABLE TO YOU OR TO ANY OTHER PERSON FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, OR ANY OTHER INDIRECT LOSS OR DAMAGE, ARISING OUT OF YOUR PURCHASE, THE MANUFACTURE OR SALE OF THE BOOKMAN PRODUCT, THIS LICENSE, OR ANY OBLIGATION RESULTING THEREFROM OR THE USE OR PERFORMANCE OF THE BOOKMAN PRODUCT UNDER ANY LEGAL THEORY, WHETHER BREACH OF CONTRACT, TORT, STRICT LIABILITY OR ANY OTHER CAUSE OF ACTION OR PROCEEDING, WHICH DAMAGES SHALL INCLUDE, BUT NOT BE LIMITED TO, LOST PROFITS, DAMAGES TO PROPERTY, OR PERSONAL INJURY (BUT ONLY TO THE EXTENT PERMITTED BY LAW). FRANKLIN'S ENTIRE LIABILITY FOR ANY CLAIM OR LOSS, DAMAGE, OR EXPENSE FROM ANY SUCH CAUSE SHALL IN NO EVENT EXCEED THE PRICE PAID FOR THE BOOKMAN PRODUCT. THIS CLAUSE SHALL SURVIVE FAILURE OF AN EXCLUSIVE REMEDY. This license and warranty is governed by the laws of the United States and the State of New Jersey.

# Index

---

?\* key 6, 7

## Articles

- finding 6, 7
- viewing location 7

## Articles menu 6

Asterisk (for finding words) 8

Auto-resume feature 4

Blue (LIST) key 2, 12

## BOOKMAN

- resetting 14
- specifications 15

## Bookmarks

- adding 12
- using 12

CAP key 8

CARD key 4, 13

## Changing

- font size 5
- shutoff time 5

Changing the screen contrast 5

Clear All Filters 11

## Color keys

- understanding 2
- using 5

Copyright 4

Correcting spellings 8

## Cross-references

- Finding 10
- using 10

Direction keys 3

FCC Notice 15

## Filters

- deselecting 10
- MARKing 11
- selecting 10
- understanding 11

## Finding

- encyclopedia articles by title 6, 7
- incomplete words 8
- words 7

Finding Outline location 7

Font size 5

Green (MARK) key 2, 12

HELP key 6

Help messages 6

Limited Warranty 15

LIST (blue) key 2

LOC (yellow) key 2, 10, 11

Locate menu 10, 12

MARK (green) key 2, 11, 12

Marking filters 11

Misspellings, correcting 8

MORE (red) key 2, 8

Numbers, typing 3

Outline location 7

Red (MORE) key 2, 8

Screen contrast 5

Selecting books 4

Set Contrast 5

Set Shutoff 5

## Index

---

**Set Type Size 5**

**Setup menu 5**

**Shutoff time 5**

**Specifications 15**

**STAR key, with CARD 13**

**Viewing**

article locations 7

help messages 6

**Word searches**

correcting misspellings 8

entering 7

expanding 8

highlight words in articles 9

understanding 8

viewing 7

**XREFs, using 10**

**Yellow (LOC) key 2**





## License Agreement

---

READ THIS LICENSE AGREEMENT BEFORE USING ANY BOOKMAN ELECTRONIC BOOK.

YOUR USE OF THE BOOKMAN ELECTRONIC BOOK DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE BOOKMAN ELECTRONIC BOOK AND YOUR PURCHASE PRICE WILL BE REFUNDED. BOOKMAN ELECTRONIC BOOK means the software product, hardware, and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

### LIMITED USE LICENSE

All rights in the BOOKMAN ELECTRONIC BOOK remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use the BOOKMAN ELECTRONIC BOOK on a single FRANKLIN BOOKMAN at a time. You may not make any copies of the BOOKMAN ELECTRONIC BOOK or of the preprogrammed data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the BOOKMAN ELECTRONIC BOOK. You may not export or reexport, directly or indirectly, the BOOKMAN ELECTRONIC BOOK without compliance with appropriate governmental regulations. The BOOKMAN ELECTRONIC BOOK contains Franklin's confidential and propriety information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.