



Platform User's Guide

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING THE POCKET PDR.

YOUR USE OF THE POCKET PDR DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE POCKET PDR AND YOUR PURCHASE PRICE WILL BE REFUNDED. The POCKET PDR means the software product, hardware, and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

LIMITED USE LICENSE

All rights in the POCKET PDR remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use the POCKET PDR. You may not make any copies of the POCKET PDR or of the pre-programmed data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the POCKET PDR. You may not export or re-export, directly or indirectly, the POCKET PDR without compliance with appropriate governmental regulations. The POCKET PDR contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Contents

| | |
|---|----------|
| Contents | 2 |
| Introduction | 2 |
| Key Guide | 3 |
| Installing Batteries | 4 |
| Installing Book Cards | 4 |
| Selecting a Book | 5 |
| Transferring Words Between Books . | 5 |
| Resetting the Platform | 6 |
| Product Care | 6 |
| Specifications and Patents | 7 |
| FCC Notice | 7 |
| Limited Warranty (U.S. only) | 8 |
| Index | 9 |

▶ For More Information

To learn more about the Pocket PDR, the Medical Book System™, or other products from Franklin Electronic Publishers, call 800-665-5450 or visit the Franklin Web site at www.franklin.com.

Introduction

The Pocket PDR® platform is a state-of-the-art handheld electronic device that lets you carry and read your medical reference books wherever you go. It is a part of the Medical Book System from Franklin Electronic Publishers.

To use the Medical Book System, you need the Pocket PDR platform and one or more Medical Book System book cards. Simply install book cards in the platform and then select the book that you want to read. It's easy to build a comprehensive, portable medical library.

This user's guide describes how to use the Pocket PDR platform only. To learn how to use an installed book card, read its user's guide.

▶ About Book Card Compatibility

The Pocket PDR platform can use Franklin BOOKMAN® book cards as well as Medical Book System book cards. However, Franklin BOOKMAN platforms cannot use Medical Book System book cards.

Key Guide

Color Keys

(MORE) (red) Displays more information, such as after a word search.

(SPEC) (green) Performs special functions, such as displaying the outline location of the current text.

(SEARCH) (yellow) Displays the search screen.

(LIST) (blue) Displays a list, such as bookmarks.

Function Keys

(BACK) Erases typed letters, or displays the previous screen.

(CAP) Shifts keys to type capitals or punctuation.

(CARD) Exits the currently selected book.

(CLEAR) Clears an entry or search.

(ENTER) Enters a word, selects a menu item, or starts the highlight in text.

(HELP) Displays help messages.

(MENU) Displays the main menus.

(ON/OFF) Turns the platform on or off.

(SPACE) At entry screens, types a space. At menus and text, pages down.

(?) At menus, displays the title of a highlighted item.

Direction Keys



Moves the cursor, text, or highlight.

Pages up or down.

Key Combinations*

(☆) + (BACK) Displays the top level of a menu from a lower level.

(☆) + (CARD) Transfers a highlighted word between installed book cards.

(☆) + (ENTER) At a highlighted menu item, displays the related text. At text, highlights a footnote, cross-reference, or bookmark.

(☆) + At text, displays the next or previous section or subsection.

(CAP) Go to the top or bottom of a menu, list, section, or entry.

► Understanding the Keys

The functions of the keys may vary according to which book card is installed and selected in the Pocket PDR platform. To learn how to use a particular book card, read its user's guide.

* Hold the first key while pressing the second.

Installing Batteries

This platform is powered by two AAA, 1.5-volt batteries. Here is how to install or replace them.

CAUTION When the batteries lose all their power or are removed from the platform, any information in an installed book card that was entered by a user may be erased.

1. Turn the platform over.
2. Remove the battery cover by compressing its tab with your finger and then lifting.

The battery cover is located on the back of the platform near the serial port.

3. Install the batteries as shown in the diagram in the battery compartment.
4. Replace the battery cover.


► Help is Always at Hand

At most screens you can view a help message by pressing (HELP). Use ↓ or (SPACE) to read the help message. To exit it, press (BACK).

Installing Book Cards

CAUTION Never install or remove a book card when the platform is turned on. If you do, information entered in any installed book cards may be erased.

1. Turn the platform off.
2. Turn the platform over.
3. Align the book card tabs with the notches in a card slot.

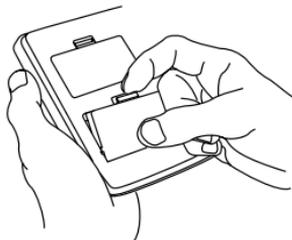

4. Press the book card until it snaps into the slot.

► Removing Book Cards

CAUTION When you remove a book card from a platform, information entered in that book card will be erased.

Selecting a Book

If you have installed two book cards in the platform, you can select which book you want to read.

1. Turn the platform on.
2. Press **CARD**.



3. Use **←** or **→** to highlight the book you want to use.



4. Press **ENTER** to select it.

► Resuming Where You Left Off

You can turn off the platform at any screen. When you turn it on again, the last screen that you viewed appears.

Transferring Words Between Books

The Pocket PDR platform enables you to look up a word from one installed book card in the other installed book card.

Some book cards are not be able to transfer words to or from other book cards. To learn if a book card can send or receive words, read its user's guide.

1. Install two book cards in the platform.
2. Select a book card to read.
3. Highlight a word in that book card.

You can highlight words in menus, lists, entries, and other text. To learn how to highlight words in a book card, read its user's guide.

4. Hold **XY** and press **CARD**.
5. Highlight the icon of the other book card and then press **ENTER**.

The word that you highlighted appears in the other book.

6. Press **ENTER** again, if needed, to search for the word.

Resetting the Platform

If due to electrostatic discharge or another cause, the platform keyboard fails to respond or its screen performs erratically, try the steps below to reset the platform. Perform only as many steps as required to restore normal operation.

CAUTION Resetting the platform when book cards are installed may erase settings and information entered in those book cards.

1. Hold  and press  twice.

If nothing happens, try Step 2.

2. Use the end of an opened paper clip to gently press the reset button on the back of the platform.

The reset button is recessed in a pin-sized hole located near the book card slots.

CAUTION Pressing the reset button with more than light pressure may permanently disable it.

If nothing happens, try Step 3.

3. Remove and reinstall the batteries.

To learn how, read “Installing Batteries” on page 4.

Product Care

To Protect the Platform

To enjoy the longest possible use of your Pocket PDR platform, please observe these precautions:

- Do not drop, or put excessive pressure on, the Pocket PDR platform.
- Do not expose the Pocket PDR platform to extreme temperatures or other adverse conditions.
- If possible, keep book cards installed in the card slots of the platform to prevent dust buildup in the slots. The best way to remove dust from the card slots is to use a camera lens blower or a small, dry brush.

To Clean the Screen or Platform

If the screen or other parts of the Pocket PDR platform become smudged or dusty, apply eyeglass cleaning fluid or isopropyl alcohol to a small, clean cloth and gently wipe them clean.

Never apply harsh or abrasive cleaners to the screen or platform.

Specifications and Patents

Model MED-1770

- batteries: two AAA 1.5-volt
- size: 14 x 9 x 2 cm
- weight: 7 oz
- 2 book card slots that can use Medical Book System and BOOKMAN book cards
- screen: 64 x 159 continuous-pixel LCD
- keyboard: QWERTY with function keys

© 1998 Franklin Electronic Publishers, Inc.
All rights reserved.

© 1998 Medical Economics Company, Inc.
All rights reserved.

Medical Book System and BOOKMAN are trademarks of Franklin Electronic Publishers, Inc.

Pocket PDR is a registered trademark of Medical Economics Company, Inc.

U.S. Patents 4,490,811; 4,830,618; 4,891,775; 5,007,019; 5,113,340; 5,153,831; 5,203,705; 5,218,536; 5,229,936; 5,249,965; 5,295,070; 5,321,609; 5,333,313; 5,396,606; 5,627,726. Euro. Patent 0 136 379.

German Pats. M9409743.7, M9409744.5.
PATENTS PENDING.

ISBN 1-56712-410-0

FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Limited Warranty (U.S. only)

Franklin Electronic Publishers, Inc. ("Franklin") warrants to the end user that this product will be free from defects in material and workmanship for a period of ONE YEAR from the date of original retail purchase, as evidenced by sales receipt. On discovery of a defect, the end user must return this product (transportation charges prepaid) either to the dealer from whom it was purchased or directly to Franklin at the address given below. Each product returned must include the user's name, address, and telephone number, as well as a brief description of the nature of the defect and a copy of the sales receipt as proof of the date of the original retail purchase. Franklin will, at its option, repair or replace any product at no further charge to the end user on determination by Franklin, in its sole discretion, that the product was defective and that such defect arose within the duration of this limited warranty.

Enclose \$3.00 check or money order for shipping and handling to Franklin Electronic Publishers, Inc.

This warranty does not apply if, in the sole discretion of Franklin, the product has been tampered with, damaged by accident, abuse, misuse, or misapplication, or as a result of service or modification by any party, including any dealer, other than Franklin. **FRANKLIN SHALL NOT BE RESPONSIBLE IN ANY WAY FOR ANY SERVICE OR MODIFICATION TO THIS PRODUCT BY ANY PARTY, INCLUDING ANY DEALER, OTHER THAN FRANKLIN.**

This warranty applies only to products manufactured by or for Franklin. Batteries, corrosion of battery contacts and any damage caused by batteries are not covered by this warranty.

ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE STRICTLY LIMITED IN DURATION TO THAT OF THE EXPRESS WARRANTY SET FORTH ABOVE, THAT IS, ONE YEAR FROM THE DATE OF ORIGINAL RETAIL PURCHASE.

THE WARRANTY AND REMEDY SET FORTH ABOVE ARE THE EXCLUSIVE REMEDY OF THE RETAIL

BUYER AND END USER IN CONNECTION WITH THE MANUFACTURE, SALE, OR USE OF THIS PRODUCT AND ARE IN LIEU OF ANY AND ALL OTHER WARRANTIES OR REMEDIES, WRITTEN OR ORAL, EXPRESS OR IMPLIED. NO FRANKLIN DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY ADDITIONAL WARRANTY IN THIS REGARD OR TO MAKE ANY MODIFICATION OR EXTENSION OF THIS EXPRESS WARRANTY.

FRANKLIN SHALL NOT BE RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR IN CONNECTION WITH THE MANUFACTURE, SALE, OR USE OF THIS PRODUCT UNDER ANY LEGAL THEORY, WHICH DAMAGES SHALL INCLUDE, BUT NOT BE LIMITED TO, LOST PROFITS, DAMAGES TO PROPERTY OR DAMAGES FOR PERSONAL INJURY (BUT ONLY TO THE EXTENT PERMITTED BY LAW). UNLESS OTHERWISE CONTRARY TO APPLICABLE LAW, FRANKLIN'S LIABILITY SHALL IN NO CASE EXCEED THE PRICE PAID FOR THE PRODUCT CLAIMED TO BE DEFECTIVE.

This warranty shall not be applicable to the extent that the enforcement of any provision may be prohibited by applicable law. This warranty gives you specific rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty may last so the above limitation or exclusion may not apply to you. Enclose \$3.00 check or money order for shipping and handling to:

FRANKLIN ELECTRONIC PUBLISHERS, INC.

ATTENTION: SERVICE DEPARTMENT

ONE FRANKLIN PLAZA

BURLINGTON, NEW JERSEY 08016-4907

609-386-2500

This product, excluding batteries, is guaranteed by Franklin for a period of one year from the date of purchase. It will be repaired or replaced (at Franklin's option) free of charge for any defect due to faulty workmanship or materials.

Products purchased outside the United States that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This guarantee does not affect the consumer's statutory rights.

- Arrow keys** 3
- Auto-resume feature** 5
- Batteries, installing** 4
- Book cards**
 - installing 4
 - platform compatibility 2
 - removing 4
 - selecting 5
- Cleaning the screen** 7
- Color keys** 3
 - key guide 3
 - understanding 3
- Direction keys** 3
- FCC notice** 8
- Function keys** 3
- Help messages** 4
- Key combinations** 3
- Platform**
 - cleaning and care of 7
 - resetting 7
 - reset button 7
 - serial port 6
- Size** 8
- Viewing help messages** 4
- Weight** 8
- Warranty**
 - U.S. 9
 - outside the U.S. 10