


Medical Book Card

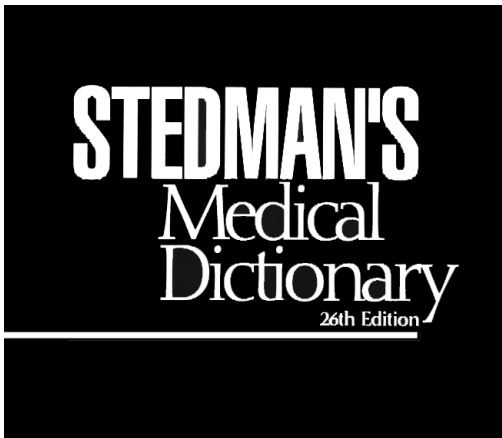

User's Guide

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING THE MEDICAL BOOK SYSTEM.

YOUR USE OF THE MEDICAL BOOK SYSTEM DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE MEDICAL BOOK SYSTEM AND YOUR PURCHASE PRICE WILL BE REFUNDED. The MEDICAL BOOK SYSTEM means the software product, hardware, and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

LIMITED USE LICENSE

All rights in the MEDICAL BOOK SYSTEM remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use the MEDICAL BOOK SYSTEM. You may not make any copies of the MEDICAL BOOK SYSTEM or of the preprogrammed data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the MEDICAL BOOK SYSTEM. You may not export or re-export, directly or indirectly, the MEDICAL BOOK SYSTEM without compliance with appropriate governmental regulations. The MEDICAL BOOK SYSTEM contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Contents

Key Guide	3
Installing Book Cards	4
Selecting a Book	4
Changing the Settings	5
Viewing a Demonstration	5
Using the Entries Menu	6
Understanding Entries and Subentries	7
Searching for Words	8
Highlighting Search Words	9
Expanding Your Searches	10
Reading Special Markers	11
Using Notes	12
Looking Up Words in Other Books	13
Resetting the Medical Book System	13
Book Card Care	14
Specifications and Patents	14
FCC Notice	15
Limited Warranty (U.S. only)	16
Index	17

► About Book Card Compatibility

IMPORTANT This book card can be used *only* with the Medical Book System™ platform and will not function in any other Franklin BOOKMAN® platform.

The Medical Book System platform can use Franklin BOOKMAN book cards as well as Medical Book System book cards. However, Franklin BOOKMAN platforms cannot use Medical Book System book cards.

► For More Information

To learn more about the Medical Book System or other products from Franklin Electronic Publishers, call 800-665-5450 or visit the Franklin Web site at www.franklin.com.

Key Guide

Color Keys

- MORE** (red) Expands a word search.
- SPEC** (green) Displays the Outline location of the current text.
- SEARCH** (yellow) Displays the word search screen.
- LIST** (blue) Lets you add, find, or remove a note.

Function Keys

- BACK** Erases typed letters, or backs up to the previous screen.
- CAP** Shifts keys to type capitals or punctuation.
- CARD** Exits the currently selected book.
- CLEAR** Clears an entry or search and goes to the default state.
- ENTER** Enters a word, selects a menu item, or starts the highlight in text.
- HELP** Displays help messages.
- MENU** Displays the main menus.
- ON/OFF** Turns the platform on or off.
- SPACE** At entry screens, types a space. At menus and text, pages down.
- ?*** At menus, displays the title of a highlighted item. With **CAP**, types an asterisk (*) to stand for letters in a word. At text, displays the current Outline location of the text.



Direction Keys

- Pages up or down.
- Moves the cursor, text, or highlight.

Key Combinations*


- ☆** + **BACK** Goes to the top level of a menu from a lower level.
- ☆** + **CARD** Transfers a highlighted word between installed book cards.
- ☆** + **ENTER** At a highlighted menu item, displays the related text. At text, highlights special markers (e.g., footnotes, cross-references, etc.).
- ☆** + **Q-P** Types numbers.
- ☆** + **DN** At text, displays the next or previous paragraph, table row, or search match.
- or **UP**
- CAP** + **↑** Goes to the top or bottom of a menu or list. At text, goes to the next or previous section.
- or **↓**

* Hold the first key while pressing the second.

Installing Book Cards

CAUTION Never install or remove a book card when the platform is turned on. If you do, information entered in any installed book cards may be erased.

1. Turn the platform off.
2. Turn the platform over.
3. Align the book card tabs with the notches in a card slot.

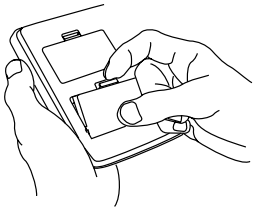

4. Press the book card until it snaps into the slot.

► Removing Book Cards

CAUTION When you remove a book card from a platform, information entered in that book card may be erased.

Selecting a Book

If you have installed two book cards in the platform, you can select which book you want to read.

1. Turn the platform on.
2. Press **CARD**.



3. Use **←** or **→** to highlight the book you want to use.



4. Press **ENTER** to select it.

► Understanding the Keys

The functions of the keys may vary according to which book card is installed and selected in the platform. To learn how to use a particular book card, read its User's Guide.

Changing the Settings

Using the Setup menu, you can adjust the type size, default state, shutoff time, and screen contrast of this book.

The type size sets how large the characters appear on screen. The shutoff time sets how long your Medical Book System stays on if you forget to turn it off.

The default state sets the screen that appears when you press **CLEAR**.

1. Press **MENU**.
2. Highlight **Set Type Size, Set Default Topic, Set Default State, Set Shutoff, or Set Contrast** on the Setup menu.




3. Press **ENTER**.
4. Use **↓** or **↑** to change the setting.
Or press **BACK** to leave the setting unchanged.
5. Press **ENTER** to select it.

Viewing a Demonstration

Before you start using this book, you may want to see a brief demonstration.

Press **MENU** and then use the arrow keys to highlight *View Demo* on the Setup menu.

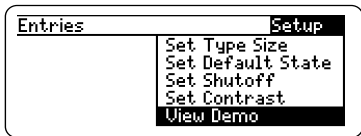

Press **ENTER** to select it. To stop the demonstration, press **CLEAR**.

► Help is Always at Hand

You can view a help message at virtually any screen by pressing **HELP**. To exit help, press **BACK**.

To read a tutorial about this book, select *Tutorial* from the Setup menu.


► Follow the Arrows

The flashing arrows at the right of the screen show which arrow keys you can press to move through menus or view more text.

Using the Entries Menu

The simplest way to find an entry is to type the term at the Entries menu.

1. Press **CLEAR**.
2. If needed, press **MENU** and highlight the Entries menu.
3. Type the name of the term you want to look up. For example, type *bursitis*.

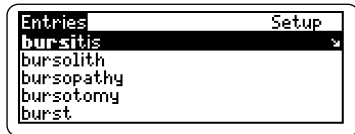


To delete a letter, press **BACK**.

You can also highlight a menu item by using \downarrow or \uparrow .

A slanted arrow indicates that the menu item has a submenu.

4. When the entry is highlighted, press **ENTER** to select it.


If you entered a main entry, select the subentry you want and press **ENTER**.

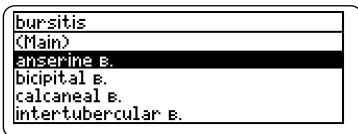

5. Press **ENTER** to view the definition.

► Misspelling

When you type letters that do not match a term on the Entries menu, the spelling correction entry screen appears. You can press **BACK** repeatedly to exit it, or you can enter the misspelled entry name to view corrections.

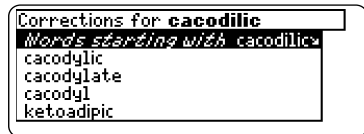

You can select *Words starting with...* to view completions, if any, or select a correction to view its definition.

Understanding Entries and Subentries

Entries are arranged in the main entry/subentry format. Most subentries are found under main entries that are single word nouns. For example, *subdeltoïd bursitis* can be found in a submenu under *bursitis*, *Babesia ovis* under *Babesia* and so on.

Note: In most subentry menus, the main headword is abbreviated to its first letter, for example *B. ovis*, so that you can type *ovis* in the *Babesia* submenu to quickly find *Babesia ovis*. Articles and prepositions can also be ignored in searches. For example to find *base of stapes* in the *Base* submenu, just type *stapes*.

Latin terms (*Nomina Anatomica*) are cross referenced to the English terms. Definitions of anatomical terms are listed under their English equivalents; for example, to find the definition faster, look up *encephalocele* instead of *cranium bifidum*.

Abbreviations are either cross-referenced to the main entry or are ex-

panded. For example if you look up *MI* you are cross-referenced to *myocardial infarction*.

Eponyms are terms named after people. A search on a person's name will yield a short biographical sketch followed by cross-references to the eponyms. For example, a search on *Weill* will take you to the *Weill, Georges* entry with a cross reference to *Weill-Marchesani syndrome*.

► Symbol and Abbreviation key


☐	Sub-entry
✱	Official alternate term
[NA]	Nomina Anatomica
[NA] ✱	Official alternate Nomina Anatomica term
abbrev.	Abbreviation

Searching for Words

Word searches find all the occurrences, or matches, of a word or word phrase in this book.

You can type up to 100 characters in a single search, but you cannot search for short, common words such as *the* and *is*.


1. Press **SEARCH** (yellow).
2. Type your search words. For example, type *sucquet*.

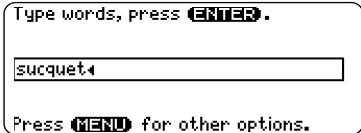

To delete a letter, use **BACK**.


You do not need to type capitals or punctuation to find matches.

3. Press **ENTER** to search.

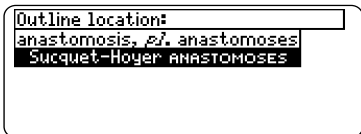


This is the Outline location of the first match of your search words.

4. Press **ENTER** to see the match.

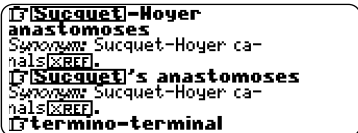

Your search words are boxed.

5. To see the Outline location of the next or previous matches, if any, hold **STAR** and press **DN** or **UP**.
6. Press **MENU** to see the matches listed on the menus.

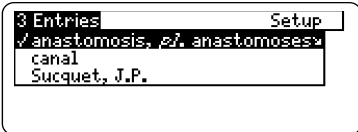

After a word search, only matching entries are listed on the menus.

7. Use the arrow keys to highlight a menu item and then press **ENTER**. If needed, select a subitem.
8. Press **SEARCH** (yellow) or **CLEAR** to clear your search.

Searching for Words

► If You Misspell a Search Word

If you enter a misspelled search word, a list of corrections appears.

Corrections for **psoriasis**

psoriasis
sauriosis
siriasis
sauriasis
psoriatic

Use **↓** to highlight a correction and then press **ENTER**.

► Searching for Parts of Words

If you want to find prefixes, suffixes, or other parts of words, type an asterisk (*) in place of the missing letters. For example, type *bacter** and then press **ENTER**. To type an asterisk, hold **CAP** and press **?**.

Matches for **bacter***

Bacteroidacea
Bacteroidaceae
Bacteroides
bacteremia
bacteri

Use **↓** to highlight a match and then press **ENTER**.

Highlighting Search Words

You can also search for a word by highlighting it in text.

1. At the text, press **ENTER**.

Bacteroidacea

A family of obligate anaerobic (microaerophilic species may occur), nonsporeforming bacteria (order Eubacteriales) containing Gram-negative rods which vary in size from minute, filterable forms to long, filamentous, branching

To turn off the highlight, press **BACK**.

2. Use the arrow keys to highlight a word.

Bacteroidacea

A family of obligate anaerobic (microaerophilic species may occur), nonsporeforming bacteria (order **Eubacteriales**) containing Gram-negative rods which vary in size from minute, filterable forms to long, filamentous, branching

3. Press **ENTER** to search for it.

If needed, press **ENTER** again to see the first match.

4. Hold **☆** and press **DN** repeatedly to see the Outline locations of the next matches, if any.


To see the location of previous matches, if any, hold **☆** and use **UP**.

5. Press **MENU** to see the menu items with matches.
6. Press **CLEAR** when finished.


Expanding Your Searches

You can double your word search by finding terms in which the word you looked up is used, not as the main word, but as an ancillary word.

1. Press **SEARCH** (yellow).
2. Type a word and then press **ENTER**.
For example, enter *steroid*.

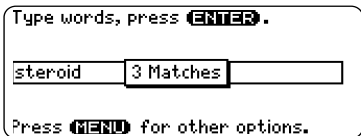


3. Press **MORE** (red) to expand the search.

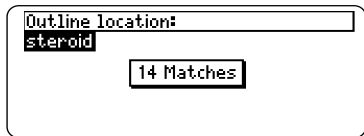

4. Hold **☆** and use **DN** to see the Outline locations of the next matches, if any.
To see the location of previous matches, if any, hold **☆** and use **UP**.

Expanding Your Searches

5. Press **MENU** to see the matches listed on the menu.

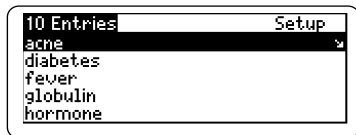



6. Press **CLEAR** when finished.

► Understanding Word Searches and Expansions


When you search for a word, either by entering it at the word search screen or by highlighting it in text, entries and subentries (in bold type) are searched for exact matches. If no exact matches are found, then the entries and subentries are searched once again for any occurrences of the selected word.

Reading Special Markers

Throughout this book, you will find cross-references (indicated by **[XREF]**'s), footnotes (**[FOOT]**'s), and formulas, equations and readings (indicated by **[FIG]**'s). Cross-references take you directly to related material in the book.

1. When you see a **[XREF]**, **[FOOT]**, or **[FIG]** in the text, hold  and press .

cheilitis or chilitis
Inflammation of the lips or of a lip.
See also: cheilosis **[XREF]**.
<cheil- + G. -itis, inflammation>
[FIG] actinic cheilitis
Synonym: solar cheilitis **[XREF]**.
[FIG] angular cheilitis

Notice the highlight. To undo the highlight, press .

2. Press .





cheilosis or chilosis
A condition characterized by dry scaling and fissuring of the lips, attributed by some to riboflavin and other nutritional deficiencies.
See also: cheilitis **[XREF]**.
<cheil- + G. -osis, condition>



3. Press  repeatedly to go back.

Reading Special Markers

► Reading Multiple Special Markers

Sometimes more than one special marker appears on screen at one time.

To highlight the first special marker, hold  and press . To highlight subsequent special markers, continue holding  and press  again.

When you have highlighted the special marker you want, press  to read it. Then press  to return to the highlighted item.

► Using and Understanding Tables

In this book card, tables are displayed as bulleted text. Row titles are in bold type and column titles and information are indented beneath them.

TABLE: Oncogenic Viruses

- **DNA viruses**
 - * *Papovaviridae*
 - + Rabbit: papillomavirus
 - + Mouse: polyoma virus (PV)
 - + Ape **[FOOT]**: simian virus 40 (SV40)
 - * *Adenoviridae*
 - + Ape, cattle, bird: adenovirus

Using Notes

To Add a Note

You can add up to 10 notes to the text of this book to quickly find the sections that you most often use.

1. When text is on screen, press **LIST** (blue).
2. Press **ENTER** to select *Add note*.

Type your note then press **ENTER**. Or press **HELP**.

tropical diseases

Press **STAR BACK** to cancel.

3. Do one of the following:
 - To accept the note title, press **ENTER**.
 - To change the note title, type your changes and then press **ENTER**.

Note titles can contain up to 24 characters.

- To cancel, hold **☆** and press **BACK**.

NOTE **tropics diseases**
Infectious and parasitic diseases endemic in tropical and subtropical zones, including Chagas' disease, leishmaniasis, leprosy, malaria, onchocerciasis, schistosomiasis, sleeping sickness, yellow fever, and others; often water- or insect-borne.

The **NOTE** marker is added to the text when you add a note.

Using Notes

To Find a Note

Once you have added notes to this book, you can easily find them.

1. Press **LIST** (blue).
2. Use **↓** to highlight a note title.
Your notes are listed by recency.
3. Press **ENTER** to go to that note.

To Remove a Note

1. Find a **NOTE** in the text of this book.
To learn how, read “To Find a Note” above.
2. Press **LIST** (blue).
3. To see the full title of the note to be removed, press **?***.
4. Press **ENTER** to select *Remove note...*
Or press **BACK** to exit without removing the note.

▶ Removing All Your Notes

You can remove all your notes at one time by resetting the Medical Book System. To learn how, read “Resetting the Medical Book System.”

WARNING Resetting the Medical Book System may erase other information that you have entered in other installed book cards.




Looking Up Words in Other Books

The Medical Book System platform enables you to look up a word from one installed book card in the other installed book card.


This book card can send words to and receive words from other book cards. Some book cards are not able to transfer words. To learn if a book card can send or receive words, read its User's Guide.

- 1. Install two book cards in the platform.**
- 2. Select a book to read.**
- 3. Highlight a word in that book .**

You can highlight words in menus, lists, entries, and other text. To learn how to highlight a word in this book, read "Highlighting Search Words."

- 4. Hold  and press .**
- 5. Highlight the icon of the other book card and then press .**

The word that you highlighted appears in the other book.

- 6. Press  again, if needed, to search for the word in the other book.**

Resetting the Medical Book System

If, due to electrostatic discharge or other cause, the keyboard fails to respond or the screen performs erratically, try the steps below to reset the platform. Perform only as many steps as required to restore normal operation.

CAUTION Resetting the platform when book cards are installed may erase settings and information entered in those book cards. Remove all book cards before resetting.

- 1. Hold  and press  twice.**

If nothing happens, try Step 2.

- 2. Use the end of an opened paper clip to gently press the reset button on the back of the platform.**

The reset button is recessed in a pin-sized hole located near the book card slots.

CAUTION Pressing the reset button with more than light pressure may permanently disable it.

If nothing happens, try Step 3.

- 3. Remove and reinstall the batteries.**

To learn how, read the Medical Book System platform's User's Guide.


Book Card Care

- **Do not touch the metal contacts on the book cards.**

CAUTION Touching the electrical contacts with statically charged objects, including your fingers, could erase information entered in a book card.



- **Do not put excessive pressure on the book cards.**

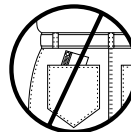

- **Do not expose the book cards to heat, cold, or liquids.**



Specifications and Patents

Model SDM-3009

- size: 5.9 x 4.2 x 0.6 cm
- weight: 0.4 oz

© 1999 Franklin Electronic Publishers, Inc. Burlington, N.J. 08016-4907 U.S.A. All rights reserved.

© 1998 Lippincott Williams & Wilkins. All rights reserved.

Stedman's is a registered trademark of Lippincott Williams & Wilkins.

MEDICAL BOOK SYSTEM and BOOK-MAN are trademarks of Franklin Electronic Publishers, Inc.

U.S. Patents 4,490,811; 4,830,618; 5,113,340; 5,321,609; 5,396,606; 5,218,536; 5,627,726

Euro. Patent 0 136 379.

German Pats. Reg. No M9409743.7;

Reg. No. M9409744.5.

PATENTS PENDING.

ISBN 1-56712-511-5

FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Limited Warranty (U.S. only)

Franklin Electronic Publishers, Inc. ("Franklin") warrants to the end user that this product will be free from defects in material and workmanship for a period of ONE YEAR from the date of original retail purchase, as evidenced by sales receipt. On discovery of a defect, the end user must return this product (transportation charges prepaid) either to the dealer from whom it was purchased or directly to Franklin at the address given below. Each product returned must include the user's name, address, and telephone number, as well as a brief description of the nature of the defect and a copy of the sales receipt as proof of the date of the original retail purchase. Franklin will, at its sole option, repair or replace with an equivalent product any product at no further charge to the end user on determination by Franklin, in its sole discretion, that the product was defective and that such defect arose within the duration of this limited warranty.

Enclose \$3.00 check or money order for shipping and handling to Franklin Electronic Publishers, Inc.

This warranty does not apply if, in the sole discretion of Franklin, the product has been tampered with, damaged by accident, abuse, misuse, or misapplication, or as a result of service or modification by any party, including any dealer, other than Franklin. **FRANKLIN SHALL NOT BE RESPONSIBLE IN ANY WAY FOR ANY SERVICE OR MODIFICATION TO THIS PRODUCT BY ANY PARTY, INCLUDING ANY DEALER, OTHER THAN FRANKLIN.**

This warranty applies only to products manufactured by or for Franklin. Batteries, corrosion of battery contacts and any damage caused by batteries are not covered by this warranty.

ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE STRICTLY LIMITED IN DURATION TO THAT OF THE EXPRESS WARRANTY SET FORTH ABOVE, THAT IS, ONE YEAR FROM THE DATE OF ORIGINAL RETAIL PURCHASE.

THE WARRANTY AND REMEDY SET FORTH ABOVE

ARE THE EXCLUSIVE REMEDY OF THE RETAIL BUYER AND END USER IN CONNECTION WITH THE MANUFACTURE, SALE, OR USE OF THIS PRODUCT AND ARE IN LIEU OF ANY AND ALL OTHER WARRANTIES OR REMEDIES, WRITTEN OR ORAL, EXPRESS OR IMPLIED. NO FRANKLIN DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY ADDITIONAL WARRANTY IN THIS REGARD OR TO MAKE ANY MODIFICATION OR EXTENSION OF THIS EXPRESS WARRANTY.

FRANKLIN SHALL NOT BE RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR IN CONNECTION WITH THE MANUFACTURE, SALE, OR USE OF THIS PRODUCT UNDER ANY LEGAL THEORY, WHICH DAMAGES SHALL INCLUDE, BUT NOT BE LIMITED TO, LOST PROFITS, DAMAGES TO PROPERTY OR DAMAGES FOR PERSONAL INJURY (BUT ONLY TO THE EXTENT PERMITTED BY LAW). UNLESS OTHERWISE CONTRARY TO APPLICABLE LAW, FRANKLIN'S LIABILITY SHALL IN NO CASE EXCEED THE PRICE PAID FOR THE PRODUCT CLAIMED TO BE DEFECTIVE.

This warranty shall not be applicable to the extent that the enforcement of any provision may be prohibited by applicable law. This warranty gives you specific rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty may last so the above limitation or exclusion may not apply to you. Enclose \$3.00 check or money order for shipping and handling to:

FRANKLIN ELECTRONIC PUBLISHERS, INC.
ATTENTION: SERVICE DEPARTMENT
ONE FRANKLIN PLAZA
BURLINGTON, NEW JERSEY 08016-4907
609-386-2500

Limited Warranty (outside U.S.)

This product, excluding batteries, is guaranteed by Franklin for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect due to faulty workmanship or materials.

Products purchased outside the United States that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This guarantee does not affect the consumer's statutory rights.

This unit may change operating modes due to Electrostatic Discharge. Normal operation of this unit can be re-established by pressing the reset key, **(ON/OFF)**, or by removing/replacing batteries.

Index

- ?* key 3, 9, 12
- Arrow keys 3, 5
- Automatic shutoff 5
- Blue (LIST) key 3
- Book cards
 - installing 4
 - platform compatibility 2
 - removing 4
 - selecting 4
- Changing
 - screen contrast 5
 - shutoff time 5
 - type size 5
- Color keys
 - key guide 3
 - understanding 3
- Default state
 - changing 5
 - defined 5
- Demonstration 5
- Direction keys 3
- Entries 7
 - abbreviations in 7
 - symbols in 7
 - understanding 7
- Function keys 3

Index

- Green (SPEC) key 3
- Help messages 5
- Highlighting
 - words 9
- Key combinations 3
- LIST (blue) key 3
- Misspellings, correcting
 - drug names 6
 - search words 9
- MORE (red) key 3
- NOTE marker 12
- Notes
 - deleting 12
 - deleting all at once 12
 - finding 12
- Red (MORE) key 3
- Reset button 13
- Screen contrast 5
- SEARCH (yellow) key 3, 8, 10
- Shutoff time 5
- SPEC (green) key 3
- Special markers, reading 11
- Subentries 7
- TABLE marker 11
- Tables
 - understanding 11
 - using 11
- Tutorial 5
- Type size 5
- Viewing
 - cross-references 11
 - demonstration 5
 - help messages 5
- Word searches, understanding 10
- Words, highlighting 9
- XREF marker 11
- Yellow (SEARCH) key 3, 8, 10

Quick Reference Guide

To Start Using a Book Card

1. Install the book card in a slot in the back of the Medical Book System platform.
2. Turn the platform on.
3. If needed, press **CARD** and then use the \Rightarrow or \Leftarrow to highlight its icon.
4. Press **ENTER** to select it.

To Use the Menu

1. Press **MENU** and highlight the Entries menu.
2. Highlight an entry by typing its name or pressing \Updownarrow .
3. Press **ENTER**.
4. Select subitems, if needed, by highlighting them and pressing **ENTER**.
5. Use \Downarrow , **DN**, or **SPACE** to scroll.

To Search for Words

1. Press **SEARCH**.
2. Type one or more words.
3. Press **ENTER**.
4. Hold \star and press **DN** to see the locations of matches, if needed.
5. To expand a search, press **MORE**.
6. To clear the search, press **CLEAR**.

To Use Notes

1. When the text of the book is on screen, press **LIST**.
2. Press **ENTER** to select *Add note*.
3. Press **ENTER** or type your own note title and then press **ENTER**.
4. To find a note in the text, press **LIST**, highlight a note title, and then press **ENTER**.
5. To remove a note, find the note in the text, press **LIST**, and then press **ENTER** to select *Remove note*.